

AG 6D-22-125



English עברית











AG 6D-22-125

en	Original operating instructions	1
he	הוראות הפעלה מקוריות	22



Original operating instructions

1 Information about the operating instructions

1.1 About these operating instructions

- Warning! Read and understand all accompanying documentation, including but not limited to instructions, safety warnings, illustrations, and specifications provided with this product. Familiarize yourself with all the instructions, safety warnings, illustrations, specifications, components, and functions of the product before use. Failure to do so may result in electric shock, fire, and/or serious injury. Save all warnings and instructions for future reference.
- **I**-III----I products are designed for professional users and only trained, authorized personnel are permitted to operate, service and maintain the products. This personnel must be specifically informed about the possible hazards. The product and its ancillary equipment can present hazards if used incorrectly by untrained personnel or if used not in accordance with the intended use.
- The accompanying documentation corresponds to the current state of the art at the time of printing. Please always check for the latest version on the product's page on Hilti's website. To do this, follow the link or scan the QR code in this documentation, marked with the symbol ().
- Ensure that these operating instructions are with the product when it is given to other persons.

1.2 Explanation of symbols

1.2.1 Warnings

Warnings alert persons to hazards that occur when handling or using the product. The following signal words are used:

A DANGER

DANGER !

> Draws attention to imminent danger that will lead to serious personal injury or fatality.

A WARNING

WARNING !

Draws attention to a potential threat of danger that can lead to serious injury or fatality.

CAUTION !

Draws attention to a potentially dangerous situation that could lead to personal injury or damage to the
equipment or other property.

1.2.2 Symbols in the operating instructions

The following symbols are used in these operating instructions:

\mathbf{S}	Comply with the operating instructions
i	Instructions for use and other useful information
	Dealing with recyclable materials
X	Do not dispose of electric equipment and batteries as household waste
	Hilti Li-ion battery
ų.	Hilti charger

1.2.3 Symbols in illustrations

The following symbols are used in illustrations:

These numbers refer to the illustrations at the beginning of these operating instructions.



3	The numbering reflects the sequence of operations shown in the illustrations and may deviate from the steps described in the text.
(11)	Item reference numbers are used in the overview illustration and refer to the numbers used in the key in the product overview section.
	These characters are intended to specifically draw your attention to certain points when handling the product.

1.3 Product-dependent symbols

1.3.1 Symbols on the product

The following symbols can be used on the product:

\bigcirc	Wear eye protection
Ø	Always work with both hands.
8	Do not work with the standard guard when carrying out cutting work.
n ₀	Rated speed under no load
/min	Revolutions per minute
RPM	Revolutions per minute
Ø	Diameter
D	The product supports near-field communication (NFC) technology compatible with iOS and Android platforms.
Li-lon	Li-ion battery
	Never use the battery as a striking tool.
*	Do not drop the battery. Never use a battery that has suffered an impact or is damaged in any other way.

1.4 Product information

products are designed for professional users and only trained, authorized personnel are permitted to operate, service and maintain the products. This personnel must be specifically informed about the possible hazards. The product and its ancillary equipment can present hazards if used incorrectly by untrained personnel or if used not in accordance with the intended use.

The type designation and serial number are printed on the rating plate.

 Write down the serial number in the table below. You will be required to state the product details when contacting Hilti Service or your local Hilti organization to inquire about the product.

Product information

Cordless angle grinder	AG 6D-22-125
Generation	01
Serial no.	

1.5 Declaration of conformity

The manufacturer declares, on his sole responsibility, that the product described here complies with the applicable legislation and standards. A copy of the declaration of conformity can be found at the end of this documentation.

The technical documentation is filed here:

Hilti Entwicklungsgesellschaft mbH | Tool Certification | Hiltistrasse 6 | D-86916 Kaufering, Germany





2 Safety

2.1 General power tool safety warnings

WARNING Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

Work area safety

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

Personal safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as a
 dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will
 reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used. Use of dust collection can reduce dust-related hazards.
- Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

Power tool use and care

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.





- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.
- Keep handles and grasping surfaces dry, clean and free from oil and grease. Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

Battery tool use and care

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or tool that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or tool to fire or excessive temperature. Exposure to fire or temperature above 130° C (265 °F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions. Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.

Service

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.
- Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

2.2 Safety instructions for all operations

Safety warnings common for grinding, sanding, wire brushing or cutting-off operations:

- This power tool is intended to function as a grinder, sander, wire brush, hole cutter or cut-off tool. Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.
- Operations such as polishing are not to be performed with this power tool. Operations for which the power tool was not designed may create a hazard and cause personal injury.
- Do not convert this power tool to operate in a way which is not specifically designed and specified by the tool manufacturer. Such a conversion may result in a loss of control and cause serious personal injury.
- Do not use accessories which are not specifically designed and specified by the tool manufacturer. Just because the accessory can be attached to your power tool, it does not assure safe operation.
- The rated speed of the accessory must be at least equal to the maximum speed marked on the power tool. Accessories running faster than their rated speed can break and fly apart.
- The outside diameter and the thickness of your accessory must be within the capacity rating of your power tool. Incorrectly sized accessories cannot be adequately guarded or controlled.
- The dimensions of the accessory mounting must fit the dimensions of the mounting hardware of the power tool. Accessories that do not match the mounting hardware of the power tool will run out of balance, vibrate excessively and may cause loss of control.
- Do not use a damaged accessory. Before each use inspect the accessory such as abrasive wheels for chips and cracks, backing pad for cracks, tear or excess wear, wire brush for loose or





cracked wires. If power tool or accessory is dropped, inspect for damage or install an undamaged accessory. After inspecting and installing an accessory, position yourself and bystanders away from the plane of the rotating accessory and run the power tool at maximum no-load speed for one minute. Damaged accessories will normally break apart during this test time.

- Wear personal protective equipment. Depending on application, use face shield, safety goggles or safety glasses. As appropriate, wear dust mask, hearing protectors, gloves and workshop apron capable of stopping small abrasive or workpiece fragments. The eye protection must be capable of stopping flying debris generated by various applications. The dust mask or respirator must be capable of filtrating particles generated by the particular application. Prolonged exposure to high intensity noise may cause hearing loss.
- Keep bystanders a safe distance away from work area. Anyone entering the work area must wear personal protective equipment. Fragments of workpiece or of a broken accessory may fly away and cause injury beyond immediate area of operation.
- Hold the power tool by insulated gripping surfaces only, when performing an operation where the cutting tool may contact hidden wiring. Contact with a "live" wire will also make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- Never lay the power tool down until the accessory has come to a complete stop. The spinning accessory may grab the surface and pull the power tool out of your control.
- ► Do not run the power tool while carrying it at your side. Accidental contact with the spinning accessory could snag your clothing, pulling the accessory into your body.
- ▶ Regularly clean the power tool's air vents. The motor's fan will draw the dust inside the housing and excessive accumulation of powdered metal may cause electrical hazards.
- > Do not operate the power tool near flammable materials. Sparks could ignite these materials.
- Do not use accessories that require liquid coolants. Using water or other liquid coolants may result in electrocution or shock.

Kickback and related warnings

Kickback is a sudden reaction to a pinched or snagged rotating wheel, backing pad, brush or any other accessory. Pinching or snagging causes rapid stalling of the rotating accessory which in turn causes the uncontrolled power tool to be forced in the direction opposite of the accessory's rotation at the point of the binding.

For example, if an abrasive wheel is snagged or pinched by the workpiece, the edge of the wheel that is entering into the pinch point can dig into the surface of the material causing the wheel to climb out or kick out. The wheel may either jump toward or away from the operator, depending on direction of the wheel's movement at the point of pinching. Abrasive wheels may also break under these conditions.

Kickback is the result of power tool misuse and / or incorrect operating procedures or conditions and can be avoided by taking proper precautions as given below.

- Maintain a firm grip with both hands on the power tool and position your body and arms to allow you to resist kickback forces. Always use auxiliary handle, if provided, for maximum control over kickback or torque reaction during start-up. The operator can control torque reactions or kickback forces, if proper precautions are taken.
- > Never place your hand near the rotating accessory. Accessory may kickback over your hand.
- Do not position your body in the area where power tool will move if kickback occurs. Kickback will propel the tool in direction opposite to the wheel's movement at the point of snagging.
- Use special care when working corners, sharp edges etc. Avoid bouncing and snagging the accessory. Corners, sharp edges or bouncing have a tendency to snag the rotating accessory and cause loss of control or kickback.
- Do not attach a saw chain woodcarving blade, segmented diamond wheel with a peripheral gap greater than 10 mm or toothed saw blade. Such blades create frequent kickback and loss of control.

Safety warnings specific for grinding and cutting-off operations:

- Use only wheel types that are specified for your power tool and the specific guard designed for the selected wheel. Wheels for which the power tool was not designed cannot be adequately guarded and are unsafe.
- The grinding surface of centre depressed wheels must be mounted below the plane of the guard lip. An improperly mounted wheel that projects through the plane of the guard lip cannot be adequately protected.
- The guard must be securely attached to the power tool and positioned for maximum safety, so the least amount of wheel is exposed towards the operator. The guard helps to protect the operator from broken wheel fragments, accidental contact with wheel and sparks that could ignite clothing.





- Wheels must be used only for specified applications. For example: do not grind with the side of cut-off wheel. Abrasive cut-off wheels are intended for peripheral grinding, side forces applied to these wheels may cause them to shatter.
- Always use undamaged wheel flanges that are of correct size and shape for your selected wheel. Proper wheel flanges support the wheel thus reducing the possibility of wheel breakage. Flanges for cut-off wheels may be different from grinding wheel flanges.
- Do not use worn down wheels from larger power tools. A wheel intended for larger power tool is not suitable for the higher speed of a smaller tool and may burst.
- When using dual purpose wheels always use the correct guard for the application being performed. Failure to use the correct guard may not provide the desired level of guarding, which could lead to serious injury.

Additional safety warnings specific for cutting-off operations:

- Do not "jam" the cut-off wheel or apply excessive pressure. Do not attempt to make an excessive depth of cut. Overstressing the wheel increases the loading and susceptibility to twisting or binding of the wheel in the cut and the possibility of kickback or wheel breakage.
- Do not position your body in line with and behind the rotating wheel. When the wheel, at the point of operation, is moving away from your body, the possible kickback may propel the spinning wheel and the power tool directly at you.
- When the wheel is binding or when interrupting a cut for any reason, switch off the power tool and hold it motionless until the wheel comes to a complete stop. Never attempt to remove the cut-off wheel from the cut while the wheel is in motion otherwise kickback may occur. Investigate and take corrective action to eliminate the cause of wheel binding.
- Do not restart the cutting operation in the workpiece. Let the wheel reach full speed and carefully re-enter the cut. The wheel may bind, walk up or kickback if the power tool is restarted in the workpiece.
- Support panels or any oversized workpiece to minimize the risk of wheel pinching and kickback. Large workpieces tend to sag under their own weight. Supports must be placed under the workpiece near the line of cut and near the edge of the workpiece on both sides of the wheel.
- ▶ Use extra caution when making a "pocket cut" into existing walls or other blind areas. The protruding wheel may cut gas or water pipes, electrical wiring or objects that can cause kickback.
- Do not attempt to do curved cutting. Overstressing the wheel increases the loading and susceptibility to twisting or binding of the wheel in the cut and the possibility of kickback or wheel breakage, which can lead to serious injury.

Safety warnings specific for sanding operations:

Use proper sized sanding disc paper. Follow manufacturers recommendations, when selecting sanding paper. Larger sanding paper extending too far beyond the sanding pad presents a laceration hazard and may cause snagging, tearing of the disc or kickback.

Safety warnings specific for wire brushing operations:

- Be aware that wire bristles are thrown by the brush even during ordinary operation. Do not overstress the wires by applying excessive load to the brush. The wire bristles can easily penetrate light clothing and / or skin.
- If the use of a guard is specified for wire brushing, do not allow any interference of the wire wheel or brush with the guard. Wire wheel or brush may expand in diameter due to work load and centrifugal forces.

2.3 Careful handling and use of batteries

- Comply with the following safety instructions for the safe handling and use of Li-ion batteries.
 Failure to comply can lead to skin irritation, severe corrosive injury, chemical burns, fire and/or explosion.
- Use only batteries that are in perfect working order.
- Treat batteries with care in order to avoid damage and prevent leakage of fluids that are extremely harmful to health!
- Do not under any circumstances modify or tamper with batteries!
- Do not disassemble, crush or incinerate batteries and do not subject them to temperatures over 80 °C (176 °F).
- Never use or charge a battery that has suffered an impact or been damaged in any other way. Check your batteries regularly for signs of damage.
- Never use recycled or repaired batteries.
- Never use the battery or a battery-operated power tool as a striking tool.
- Never expose batteries to the direct rays of the sun, elevated temperature, sparking, or open flame. This
 can lead to explosions.







- Do not touch the battery poles with your fingers, tools, jewelry, or other electrically conductive objects. This can damage the battery and also cause material damage and personal injury.
- Keep batteries away from rain, moisture and liquids. Penetrating moisture can cause short circuits, electric shock, burns, fire and explosions.
- Use only chargers and power tools approved for the specific battery type. Read and follow the relevant
 operating instructions.
- Do not use or store the battery in explosive environments.
- If the battery is too hot to touch, it may be defective. Put the battery in a place where it is clearly visible and where there is no risk of fire, at an adequate distance from flammable materials. Allow the battery to cool down. If it is still too hot to touch after an hour, the battery is faulty. Consult **Hilti** Service or read the document entitled "Instructions on safety and use for **Hilti** Li-ion batteries".



Read the instructions on safety and use of **Hilti** Li-ion batteries that you can access by scanning the QR code at the end of these operating instructions.

2.4 Additional safety instructions

Personal safety

- ▶ Use the product and accessories only when they are in perfect working order.
- Never tamper with or modify the product or accessories in any way.
- ▶ Wear ear protectors. Exposure to noise can cause hearing loss.
- Always hold the product with both hands on the grips provided. Keep the grips dry, clean and free from oil and grease.
- Respiratory protection must be worn if the product is used without a dust removal system for work that creates dust.
- Take frequent breaks and do physical exercises to improve the blood circulation in your fingers. High vibration during long periods of work can lead to disorders of the blood vessels and nervous system in the fingers, hands and wrists.
- Do not touch rotating parts. Switch the product on only after it is in position at the workpiece. Touching rotating parts, especially rotating accessory tools, can result in injury.
- The product is not intended for use by debilitated persons who have received no special training. Keep the product out of reach of children.
- Dust produced by grinding, sanding, cutting and drilling can contain dangerous chemicals. Some examples are: lead or lead-based paints; brick, concrete and other masonry products, natural stone and other products containing silicates; certain types of wood, such as oak, beech and chemically treated wood; asbestos or materials that contain asbestos. Determine the exposure of the operator and bystanders by means of the hazard classification of the materials to be worked. Implement the necessary measures to restrict exposure to a safe level, for example by the use of a dust collection system or by the wearing of suitable respiratory protection. The general measures for reducing exposure include:
 - working in an area that is well ventilated,
 - avoidance of prolonged contact with dust,
 - directing dust away from the face and body,
 - wearing protective clothing and washing exposed areas of the skin with water and soap.
- The user and the other persons in the vicinity must wear suitable eye protection, a hard hat and ear
 protection while the product is in use.
- Risk of injury by falling tools and/or accessories. Before starting work, check that the battery and installed accessories are secure.
- Keep the air vents clear at all times. Risk of burn injuries due to blocked air vents!
- Switch the product on only after you have brought it to the working position.
- Wait until the product stops completely before you lay it down.
- Wear protective gloves when changing the accessory tool. Touching the accessory tool can result in cuts and burns.
- If the product detects operation beyond its limits or a discharged battery, there is a possibility that the tool will no longer be braked by the motor.

Power tool use and care

- Grinding wheels must be stored and handled carefully in accordance with the manufacturer's instructions.
- Never use the product without the guard.





- Secure the workpiece. Use clamps or a bench vise to hold the workpiece in position. The workpiece is thus held more securely than by hand and both hands remain free to operate the product.
- Wear ear protectors. Grinding thin sheet metal or other large-area structures prone to vibration can lead to noise emissions much higher than the stated noise emission values. Insofar as possible, prevent workpieces of this nature from emitting noise by adopting suitable measures such as application of heavy, flexible insulating mats.
- Do not use cut-off wheels for grinding.
- Tighten the accessory tool and flange securely. If the accessory tool and flange are not tightened securely, the accessory tool may work loose from the arbor due to the braking effect of the motor after switching off.
- Do not attach a belt hook to this product.

Electrical safety

- Before beginning work, check the working area for concealed electric cables or gas and water pipes. External metal parts of the product could give you an electric shock or cause an explosion if you accidentally damage an electric cable or a gas or water pipe.
- Dirty or dusty products that have been used frequently for work on conductive materials should be checked at regular intervals by Hilti Service. Dust (especially dust from conductive materials) or dampness adhering to the surface of the power tool may, under unfavorable conditions, lead to electric shock.

Workplace

- Apply appropriate safety measures at the opposite side of the workpiece in work that involves breaking through. Pieces of debris could drop out and / or fall down and injure other persons.
- Slits cut in load-bearing walls of buildings or other structures may influence the statics of the structure, especially when steel reinforcing bars or load-bearing components are cut through. Consult the responsible structural engineer, architect or person in charge of the building project before beginning the work

Additional notes on the use of the guards

To avoid the risks below always use the correct guard, see the section headed: "Suitability of wheels for the equipment used".

- If the Standard quard with front cover is used for surface grinding, the guard can touch the workpiece and thus lead to loss of control.
- If a wire brush of a thickness exceeding the maximum permissible thickness is used, the wires can snag on the guard and break.
- If the standard guard is used for cutting off metal with an abrasive cut-off wheel, there is an increased risk of exposure to sparks and particles and to wheel fragments if the wheel breaks.
- If the standard guard is used with or without front cover for cutting or for grinding concrete or masonry, there is a higher dust load and an increased risk of losing control of the product, which can lead to kickbacks.





3.1 Product overview



- Guard release button
- 2 Spindle lock button
- ③ Lockable on/off switch
- Battery status indicator
- 5 Battery release button
- 6 Battery
- Spark guard
- (8) Air vents
- (9) Main grip with sensor surfaces, Sens-Tech function
- 10 Side handle
- (1) Threaded bushing for the grip
- (12) Standard guard with front cover
- (1) Clamping flange with O-ring
- Abrasive cut-off wheel / abrasive grinding wheel
- (15) Clamping nut
- (16) Kwik lock quick-release lock nut (optional)
- 1 Pin wrench

3.2 Intended use

The product described is a hand-held cordless angle grinder. It is designed for cutting and grinding metal and mineral materials, brushing, sanding and for hole cutting in tiles, all without use of water.

- The tool can be used for cutting, slitting and grinding mineral materials only in combination with the appropriate guard.
- A dust removal hood together with a suitable Hilti vacuum cleaner must be used for working on mineral materials such as concrete or stone.
- For this product, use only Hilti Nuron lithium-ion batteries of the B 22 series. For optimum performance, Hilti recommends the batteries stated in the table at the end of these operating instructions for this product.
- For these batteries, use only **Hilti** chargers of the type series stated in the table at the end of these operating instructions.

3.3 Items supplied

Angle grinder, side handle, standard guard, front cover, clamping flange, clamping nut, wrench, operating instructions.

Other system products approved for use with this product can be found at your local Hilti Store or at: www.hilti.group

3.4 3D Active Torque Control (^{3D}ATC)

The product has **3D Active Torque Control** (^{3D}ATC).

If it detects a sudden, unforeseen movement in operation, the product automatically shuts down immediately.



P

If ^{3D}ATC has tripped, switch the product off and then on again.

3.5 SensTech function 2

This product is equipped with **Hilti SensTech** functionality. There are proximity sensors located in regions (1) and (2) above which detect when a user's hand is in contact with the tool body. The user must fully and firmly grip the tool body ensuring that at least one of the sensor regions is covered. If the user's hand is removed or not enclosing a sensor region, the product will not turn on and if in operation will automatically shut-off.

The **Hilti SensTech** functionality is an electrical capacitance-based system and is not meant to replace proper use or the safety instructions provided herein. Always ensure the gripping areas are free of liquid, dirt, and other conductive / capacitive materials (i.e. metal shavings) prior to use. These conductive materials may impair the **SensTech** functionality or render it inactive.

If the **SensTech** has tripped, switch the product off and on again.

3.6 Motor protection function

The motor protection function monitors current consumption and motor temperature and prevents the product from overheating.

If the motor is overloaded through application of excessive working pressure, the product's performance drops noticeably or it might stall completely.

If the power tool stalls or slows significantly due to overloading, release the pressure applied to the product and then allow it to run under no load for approx. 30 seconds.

3.7 Integrated brake

The integrated brake reduces the time it takes until the accessory tool stops rotating after switching off.

This functions correctly only as long as the product is supplied with electric current. Braking time varies, depending on the selected accessory tool.

3.8 Front cover 3

Use the standard guard with front cover for the applications listed below:

- Grinding with straight grinding discs
- Cutting with cut-off wheels

3.9 DC-EX 125/5"C compact dust hood for cutting (accessory) 4

Use the DC-EX 125/5"C compact hood when working on mineral materials and for the following jobs:

Cutting with diamond cut-off wheels

Use of this guard for working on metal is not permissible.

The dust hood is suitable only for accessory tools with a diameter of max. 125 mm (5").

3.10 DG-EX 125/5" dust hood for grinding (accessory) 5

The grinding system is suitable only for occasional use with diamond cup wheels for grinding mineral materials.

Use of this guard for working on metal is not permissible.



The dust hood is suitable only for accessory tools with a diameter of max. 125 mm (5").





3.11 DC-EX 125/5"M dust hood for cutting (accessory)

The power tool may be used for cutting and slitting work on mineral materials only when fitted with a dust hood. Use of this guard for working on metal is not permissible.

The dust hood is suitable only for accessory tools with a diameter of max. 125 mm (5").

3.12 Status indicators of the Li-ion battery

Hilti Nuron Li-ion batteries can indicate state of charge, fault messages and the battery's state of health.

3.12.1 Indicators for state of charge and fault messages

A WARNING

1

Risk of injury by a falling battery!

If the release button is pressed with a battery inserted in the product, subsequently check that the battery
is correctly re-engaged and secure.

Short-press the release button of the battery to get whichever of the following status indications is applicable at the time.

State of charge and, if applicable, faults are indicated constantly as long as the connected product is switched on.

Status	Meaning
Four (4) LEDs show constantly green	State of charge: 100 % to 71 %
Three (3) LEDs show constantly green	State of charge: 70 % to 51 %
Two (2) LEDs show constantly green	State of charge: 50 % to 26 %
One (1) LED shows constantly green	State of charge: 25 % to 10 %
One (1) LED slow-flashes green	State of charge: < 10 %
One (1) LED quick-flashes green	The Li-ion battery is completely discharged. Recharge the battery. If the LED again starts quick-flashing after the bat- tery has been charged, consult Hilti Service.
One (1) LED quick-flashes yellow	The Li-ion battery or the product in which it is in- serted is overloaded, too hot or too cold, or experi- encing some other fault. Bring the product and the battery to the recom- mended working temperature and do not overload the product when it is in use. If the message persists, consult Hilti Service.
One (1) LED shows yellow	The Li-ion battery and the product in which it is inserted are not compatible. Consult Hilti Service.
One (1) LED quick-flashes red	The Li-ion battery is locked and cannot be used. Consult Hilti Service.

3.12.2 Indicators showing the battery's state of health

To check the battery's state of health, press the release button and hold it down for longer than three seconds. The system does not detect a potential malfunction of the battery due to misuse, for example battery dropped or pierced, external heat damage, etc.

Status	Meaning
All LEDs show in sequence, followed by one (1) LED showing constantly green.	The battery can remain in use.
All LEDs show in sequence, followed by one (1) LED quick-flashing yellow.	The check to ascertain the battery's state of health did not complete. Repeat the procedure, or consult Hilti Service.





Status	Meaning
All LEDs show in sequence, followed by one (1) LED showing constantly red.	If a connected product can still be used, the re- maining battery capacity is below 50 %. If a connected product can no longer be used, the battery has reached the end of its useful life and has to be replaced. Consult Hilti Service.

3.13 Dimensions and format of suitable diamond slitting wheels

Diamond slitting wheels must meet the following requirements in terms of dimensions and format.

Technical data	
Slot width between segments (G)	≤ 10 mm
Cutting angle	Negative



4 Consumables

Use only synthetic resin-bonded, fiber-reinforced wheels with a maximum Ø of 125 mm (5") approved for a rotational speed of at least 11000 rpm and a peripheral speed of 80 m/s.

ATTENTION! When cutting or slitting with cut-off wheels always use the standard guard with the additional front cover, or a fully enclosing dust hood.

	Application	Designation	Material	max. thickness	max. diameter
Abrasive cut-off wheel	Cutting, slitting	AC-D	Metal	2.5 mm	125 mm
Diamond cut-off wheel	Cutting, slitting	DC-TP, DC-D (SPX, SP, P)	Mineral	3 mm	125 mm
Abrasive grinding wheel	Rough grinding	AG-D, AF-D, AN-D	Metal	6.4 mm	125 mm
Diamond grinding wheel	Rough grinding	DG-CW (SPX, SP, P)	Mineral	-	125 mm
Wire cup brush	Wire brushes	3CS, 4CS	Metal	—	75 mm
Wheel brush		3SS, 4SS		27 mm	125 mm
Diamond core bit	Hole cutting in tiles	DD-M14	Mineral	-	125 mm
Abrasive resin-fiber wheel	Rough grinding	AP-D	Metal	-	125 mm

Accessory tools

Suitability of discs for the equipment used

Item	Equipment	AC-D	AP-D	AG-D AF-D AN-D	DG-CW (SPX/SP/P)	DC-TP DC-D (SPX/SP/P)	3CS/4CS 3SS/4SS DD-M14
A	Guard (standard)	1	1	1	1	1	1
В	Front cover (in combination with A)	1	_	_	_	1	_
С	Dust hood (grinding) DG-EX 125/5"	_	_	_	✓	_	_





Item	Equipment	AC-D	AP-D	AG-D AF-D AN-D	DG-CW (SPX/SP/P)	DC-TP DC-D (SPX/SP/P)	3CS/4CS 3SS/4SS DD-M14
D	Dust hood (cutting) DC-EX 125/5"C (in combination with A)	_	_	_	_	✓	_
E	Dust hood (slitting) DC-EX 125/5"M	_	_	_	_	1	_
F	Adapter DC-EX SL (in combination with E)	_	_	_	_	1	-
G	Side handle (standard)	1	1	1	1	1	~
н	DCBG 125 hoop handle (optional for G)	1	1	1	1	1	~
I	Clamping nut (standard)	1	_	1	1	1	_
J	Clamping flange (standard)	1	_	1	1	1	_
к	Kwik lock (optional for l	1	_	1	_	1	_
L	Clamping nut (abrasive resin-fiber disc)	_	1	_	_	_	-
м	Support plate (abrasive resin-fiber disc)	_	1	_	—	_	_

5 Technical data

5.1 Product properties

Weight in accordance with EPTA Procedure 01, without battery	2.0 kg
Rated voltage	21.6 V
Rated speed	8,500 /min
Maximum wheel diameter	125 mm
Drive spindle thread	M14
Spindle length	22 mm
Maximum core bit diameter	125 mm
Ambient temperature for operation	−17 °C 60 °C
Storage temperature	−20 °C 70 °C

5.2 Battery

Battery operating voltage	21.6 V
Weight, battery	See the end of these operating instructions
Ambient temperature for operation	−17 °C 60 °C
Storage temperature	−20 °C 40 °C
Battery charging starting temperature	−10 °C 45 °C





5.3 Noise information and vibration values in accordance with EN 62841

The sound pressure and vibration values given in these instructions have been measured in accordance with a standardized test and may be used to compare one power tool with another. They may be used for a preliminary assessment of exposure.

The data given represent the main applications of the power tool. However, if the power tool is used for different applications, with different accessory tools, or is poorly maintained, the data can vary. This can significantly increase exposure over the total working period.

An accurate estimation of exposure should also take into account the times when the power tool is switched off, or when it is running but not actually being used for a job. This can significantly reduce exposure over the total working period.

Identify additional safety measures to protect the operator from the effects of noise and/or vibration, for example: Maintaining the power tool and accessory tools, keeping the hands warm, organization of work patterns.

Grinding thin sheet metal or other large-area structures prone to vibration can lead to increased noise emissions higher than the stated noise emission values. You can reduce the noise emissions produced in this way by adopting noise-reducing measures such as the application of heavy, flexible insulating mats. Always take these increased values into consideration as well in the hazard assessment of noise exposure and in the choice of suitable hearing protection.

Noise information

	AG 6D-22-125
Sound pressure level (L _{pA})	86 dB(A)
Uncertainty for the sound pressure level $(K_{\mbox{\tiny pA}})$	3 dB(A)
Sound power level (L _{wA})	94 dB(A)
Uncertainty for the sound power level (K _{WA})	3 dB(A)

Vibration information

Other applications, such as cutting, may produce vibration values that deviate from the given values.

		AG 6D-22-125
Surface grinding with the vibration-absorbing side handle	B 22-55	4.2 m/s ²
(a _{h,AG})	B 22-255	6.4 m/s ²
Sanding with sandpaper with the vibration-absorbing side	B 22-55	2.7 m/s ²
handle (a _{h,DS})	B 22-255	3.7 m/s ²
Uncertainty (K)		1.5 m/s ²

6 Preparations at the workplace

\Lambda WARNING

Risk of injury by inadvertent starting!

- ▶ Before inserting the battery, make sure that the product is switched off.
- ▶ Remove the battery before making any adjustments to the power tool or before changing accessories.

Observe the safety instructions and warnings in this documentation and on the product.

6.1 Charging the battery

- 1. Before charging the battery, read the operating instructions for the charger.
- 2. Make sure that the contacts on the battery and the contacts on the charger are clean and dry.
- 3. Use an approved charger to charge the battery. → page 9





6.2 Inserting the battery

\Lambda WARNING

Risk of injury by short circuit or falling battery!

- Before inserting the battery, make sure that the contacts on the battery and the contacts on the product are free of foreign matter.
- Make sure that the battery always engages correctly.
- 1. Charge the battery fully before using it for the first time.
- 2. Push the battery into the product until it engages with an audible click.
- 3. Check that the battery is seated securely.

6.3 Removing the battery

- 1. Press the battery release button.
- 2. Remove the battery from the product.

6.4 Installing the Hilti retaining strap (optional) 7

When working with the product, you must comply with national regulations for working at heights. Comply with the operating instructions of the retaining strap.

- 1. Position the two tabs of the retaining strap accurately on the spark guard.
- 2. Secure the retaining strap with the corresponding screws through the holes provided in the spark guard.
- 3. Insert the battery. \rightarrow page 15

6.5 Fall arrest

WARNING

Risk of injury by falling tool and/or accessory!

- ► Use only the Hilti tool tether recommended for your product.
- Prior to each use, always check the attachment point of the tool tether for possible damage.



As drop arrester for this product, use only a combination of the **Hilti** retaining strap and the **Hilti** tool tether #2261970.

- Secure the retaining strap as described in the section headed Installing Hilti retaining strap → page 15. Check that it holds securely.
- Secure one carabiner of the tool tether to the retaining strap and secure the second carabiner to a load-bearing structure. Check that both carabiners hold securely.

i

Comply with the operating instructions of the Hilti retaining strap and those of the Hilti tool tether.

6.6 Fitting the side handle

Screw the side handle into one of the threaded bushings provided.

6.7 Fitting or removing the guard

Risk of injury. The accessory tool may be hot or have sharp edges.

- Wear protective gloves when fitting, removing or adjusting the accessory tool or other parts and when troubleshooting.
- Observe the instructions for fitting the applicable guard.





6.7.1 Installing the guard (standard) 3



The guard is keyed to ensure that only guards of a type suitable for use with the product can be installed. The locating lugs of the guard fit into the guard mount on the product.

- 1. Fit the guard on to the arbor collar so that the two triangular marks on the guard and on the product are in alignment.
- 2. Press the guard on to the drive spindle collar.
- 3. Press the guard release button and turn the guard until it engages in the desired position.
 - The guard release button jumps back.

6.7.2 Adjusting the guard (standard)

Press the guard release button and then rotate the guard until it engages in the desired position.

6.7.3 Removing the guard (standard)

- 1. Press and hold down the guard release button and turn the guard until the triangular marks on the guard and on the product are in alignment.
- 2. Remove the guard.

6.8 Fitting or removing the front cover 9



The front cover must be in position on the standard guard.

- 1. Position the front cover, with the closed side facing up, on the standard guard.
- The lock must engage with an audible click.
- 2. To remove, open the lock of the front cover.
- 3. Remove the front cover from the standard guard.

6.9 Fitting and removing accessory tools

Risk of injury. The accessory tool may be hot.

- Wear protective gloves when changing the accessory tool.
- Diamond discs must be replaced when their cutting or grinding performance drops significantly. This generally is the case when the segments reach a height of less than 2 mm.

Other discs must be replaced when their cutting performance drops significantly or other parts of the angle grinder (not the disc) come into contact with the material you are working on.

Abrasive discs must be replaced when their expiry date has been reached.

6.9.1 Installing accessory tool 10

\Lambda WARNING

Risk of injury. The accessory tool may work loose due to the braking effect of the motor.

- Wait until the accessory tool has come to a standstill before touching or gripping the accessory tool or the clamping nut.
- Secure the accessory tool by tightening the clamping flange and clamping nut firmly so that no parts work loose from the spindle due to the braking effect of the motor.
- 1. Clean the clamping flange and the clamping nut.
- 2. Check that the O-ring is in place in the clamping flange and that it is undamaged.
 - Replace the O-ring if it is missing or damaged.
- 3. Fit the clamping flange on to the spindle (keyed fit to prevent slipping and rotation).
- 4. Fit the accessory tool.
- 5. Screw the clamping nut on to the drive spindle collar.
- 6. Press and hold down the spindle lock button.
- 7. Tighten the clamping nut with the pin wrench.





6.9.2 Removing accessory tool

A WARNING

Risk of breakage and irreparable damage. If the spindle lockbutton is pressed while the spindle is rotating, the accessory tool can detach from the power tool.

- Press the spindle lockbutton only when the spindle has stopped rotating.
- 1. Press and hold down the spindle lock button.
- 2. Release the clamping nut by gripping it with the pin wrench and turning the wrench counter-clockwise.
- 3. Release the spindle lock button and remove the accessory tool.

6.9.3 Installing Kwik lock 11

WARNING

Risk of breakage. Heavy wear (abrasion) may cause the Kwik lock nut to break.

- When working with the power tool, make sure that the Kwik lock nut doesn't come into contact with the working surface.
- Do not use a damaged Kwik lock nut.

The optional **Kwik lock** quick-release lock nut can be used instead of the standard clamping nut. Accessory tools can then be changed without need for additional tools (keyless system).

- 1. Clean the clamping flange and the clamping nut.
- 2. Check that the O-ring is in place in the clamping flange and that it is undamaged.
- Replace the O-ring if it is missing or damaged.
- 3. Fit the clamping flange on to the spindle (keyed fit to prevent slipping and rotation).
- 4. Fit the accessory tool.
- 5. Tighten the Kwik lock quick-release lock nut until it is seated on the accessory tool.
- ► The Kwik lock name should be visible when the nut is screwed on.
- 6. Press and hold down the spindle lock button.
- 7. Firmly turn the accessory tool clockwise by hand until the **Kwik lock** quick-release lock nut is fully tightened.
- 8. Release the spindle lock button.

6.9.4 Removing Kwik lock

If the **Kwik lock** quick-release lock nut cannot be released by turning it by hand, use a pin wrench to turn the nut counter-clockwise.

Never use a pipe wrench or an adjustable wrench of any kind. Use of the wrong tool can damage the **Kwik lock** quick-release lock nut.

- 1. Press and hold down the spindle lock button.
- 2. Release the **Kwik lock** quick-release lock nut by turning the quick-release lock nut counter-clockwise by hand.
- 3. Release the spindle lock button and remove the accessory tool.

6.10 Installing core bit 12

- 1. Fit the side handle. \rightarrow page 15
- 2. Install the standard guard. → page 16
- 3. Place the core bit in position and tighten it hand-tight.
- 4. Press and hold down the spindle lock button.
- 5. Tighten the core bit with a suitable open-end wrench.
- 6. Release the spindle lock button and remove the pin wrench.

6.11 Installing wire brush 13

- 1. Fit the side handle. → page 15
- 2. Install the standard guard. \rightarrow page 16
- Place the wire brush in position and tighten it hand-tight.





- 4. Press and hold down the spindle lock button.
- 5. Tighten the wire brush with a suitable open-end wrench.

6.12 Fitting the abrasive resin-fiber disc 14

- 1. Fit the side handle. \rightarrow page 15
- 2. Install the standard guard. \rightarrow page 16
- 3. Fit the support plate and the abrasive resin-fiber disc, screw on the clamping nut and tighten it securely.
- 4. Press and hold down the spindle lock button.
- 5. Use the pin wrench to tighten the clamping nut.

7 Operation

Observe the safety instructions and warnings in this documentation and on the product.

Risk of injury triggered by capacitive materials! Materials with a capacitive effect can impair the Sens-Tech function. Under these circumstances the product does not switch off although the grip has been released.

- Always switch the product off by means of the on / off switch before you set the product down.
- Keep the sensor surfaces clean and dry.
- Keep sufficiently far away, approximately 10 mm, from other materials that have a capacitive effect.
- Remain alert and comply with all safety instructions at all times.

7.1 Switching on or off 15

Switching on

Т

Be sure to hold the product by the grips designed for the purpose. If the main grip is not fully enclosed by the operator's hand or if the main grip is released, the product shuts down automatically. If the **Sens-Tech** function has tripped, switch the product off and then on again.

- 1. Press and hold down the rear section of the on/off switch.
- 2. Slide the on/off switch forward.
 - The motor runs.
- 3. Lock the on/off switch.

Switching off

- 4. Press the rear section of the on/off switch.
 - ► The on/off switch jumps to the **Off** position and the motor stops.

7.2 Grinding

Risk of injury. The accessory tool may suddenly stick or stall.

Use the product with the side handle (or optional hoop handle) fitted and always hold the product securely
with both hands.

Do not allow the accessory tool to jam and avoid excessive pressure on the product.

7.3 Cutting

 When cutting, keep the rate of advance moderate and do not tilt the product or the cut-off wheel to either side (working position is at approx. 90° to the cutting plane).

For best results when cutting profiles and small rectangular tube, start cutting with the cut-off wheel at the smallest cross-section.

7.4 Rough grinding

WARNING

Risk of injury. The abrasive cut-off wheel could shatter and flying fragments may cause injury.

Never use abrasive cut-off wheels for grinding.





- ▶ Move the product to and fro while maintaining a 5° to 30° angle of attack and applying moderate pressure.
 - > This will avoid overheating and discoloration of the workpiece and help ensure an even surface finish.

8 Care and maintenance

WARNING

Risk of injury with battery inserted !

Always remove the battery before carrying out care and maintenance tasks!

DANGER

Electric shock due to breakdown of protective insulation. When working on metal under extreme conditions, conductive dust (e.g. metal, carbon fiber) may accumulate inside the power tool, thereby adversely affecting the protective insulation.

- Use a stationary dust extraction system when working under extreme conditions.
- Clean the air vents frequently.

Care of the product

- Carefully remove stubborn dirt.
- Use only a slightly damp cloth to clean the housing. Do not use cleaning agents containing silicone as these can attack the plastic parts.
- · Use a dry, clean cloth to clean the contacts of the product.

Care of the Li-ion batteries

- Never use a battery with clogged air vents. Clean the air vents carefully using a dry, soft brush.
- Avoid unnecessary exposure of the battery to dust and dirt. Never expose the battery to high levels of
 moisture (e.g. by being dipped in water or left in the rain).
 If a battery has been soaked by moisture, treat it as a damaged battery. Isolate it in a non-flammable

If a battery has been soaked by moisture, treat it as a damaged battery. Isolate it in a non-flammable container and consult **Hilti** Service.

Keep the battery free of extraneous oil and grease. Do not permit dust or dirt to accumulate unnecessarily
on the battery. Clean the battery with a dry, soft brush or a clean, dry cloth. Do not use cleaning agents
containing silicone as these can attack the plastic parts.

Do not touch the contacts of the battery and do not remove the factory-applied grease from the contacts.

 Use only a slightly damp cloth to clean the housing. Do not use cleaning agents containing silicone as these can attack the plastic parts.

Maintenance

- Check all visible parts and controls for signs of damage at regular intervals and make sure that they all function correctly.
- Do not use the product if signs of damage are found or if parts malfunction. Immediately have the product repaired by **Hilti** Service.
- After cleaning and maintenance, install all guards and protective devices and check that they are in full working order.

To help ensure safe and reliable operation, use only genuine Hilti spare parts and consumables. Spare parts, consumables and accessories approved by **Hilti** for use with your product can be found at your **Hilti Store** or online at: **www.hilti.group**

9 Transport and storage of cordless tools and batteries

Transport

Accidental starting during transport !

- Always transport your products with the batteries removed!
- Remove the battery/batteries.
- Never transport batteries loose and unprotected. During transport, batteries should be protected from excessive shock and vibration and isolated from any conductive materials or other batteries that may come in contact with the terminals and cause a short circuit. Comply with the locally applicable regulations for transporting batteries.





- Do not send batteries through the mail. Consult your shipper for instructions on how to ship undamaged batteries.
- Prior to each use and before and after prolonged transport, check the product and the batteries for damage.

Storage

\Lambda WARNING

Accidental damage caused by defective or leaking batteries !

- Always store your products with the batteries removed!
- Store the product and the batteries in a cool and dry place. Comply with the temperature limits stated in the technical data.
- Do not store batteries on the charger. Always remove the battery from the charger when the charging operation has completed.
- Never leave batteries in direct sunlight, on sources of heat, or behind glass.
- Store the product and batteries where they cannot be accessed by children or unauthorized persons.
- Prior to each use and before and after prolonged storage, check the product and the batteries for damage.

10 Troubleshooting

If a problem occurs, always observe the charge-status and fault indicator of the battery. See the section headed **Status indicators of the Li-ion battery**.

If the trouble you are experiencing is not listed in this table or you are unable to rectify the problem by yourself, contact **Hilti** Service.

Trouble or fault	Possible cause	Action to be taken
Product does not switch off when the grip is released.	Sensor surface dirty and/or wet	 Switch the on / off switch off and clean and dry the sensor surfaces.
	Sensor surfaces are still registering user's hand	 Switch the on/off switch off.
	Sensor surfaces triggered by ca- pacitive coupling.	Switch the on / off switch off and increase the distance (≥ 10 mm) of the sensor surfaces from the capacitive material.
The product can't be switched on.	Battery is discharged.	 Change the battery and charge the empty battery.
	Grip not fully enclosed by opera- tor's hand.	 Hold the product correctly by the main grip.
Product switches off unex- pectedly.	Grip not fully enclosed by opera- tor's hand.	 Switch the product off and then on again. → page 18
		 Hold the product correctly by the main grip .
The battery runs down more quickly than usual.	Very low ambient temperature.	 Allow the battery to warm up slowly to room temperature.
The battery doesn't engage with an audible click.	The retaining lug on the battery is dirty.	 Clean the retaining lug and re-insert the battery.
The angle grinder or battery gets very hot.	Electrical fault	 Switch the product off immedi- ately, remove the battery, keep it under observation, allow it to cool down and contact Hilti Service.
	Clogged air vents	 Regularly clean the air vents.
The motor has no braking effect.	Battery is discharged.	• Change the battery and charge the empty battery.
	Product is momentarily overload- ed.	 Switch the product off and then on again.





11 Disposal

WARNING

Risk of injury due to incorrect disposal! Health hazards due to escaping gases or liquids.

- DO NOT send batteries through the mail!
- Cover the terminals with a non-conductive material (such as electrical tape) to prevent short circuiting.
- Dispose of your battery out of the reach of children.
- Dispose of the battery at your Hilti Store, or consult your local governmental garbage disposal or public health and safety resources for disposal instructions.

Most of the materials from which **Hilti** products are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, your old tools, machines or appliances can be returned to **Hilti** for recycling. Ask **Hilti** Service or your Hilti sales representative for further information.

Do not dispose of power tools, electronic equipment or batteries as household waste!

12 Manufacturer's warranty

Please contact your local Hilti representative if you have questions about the warranty conditions.

13 Further information

For more information on operation, technology, environment and recycling, follow this link: qr.hilti.com/manual?id=2233920&id=2233921

This link is also to be found at the end of the documentation, in the form of a QR code.





הוראות הפעלה מקוריות

1 מידע על הוראות ההפעלה

1.1 על הוראות הפעלה אלו

- אזהרה! לפני השימוש במוצר יש לקרוא ולהבין את הוראות ההפעלה המצורפות למוצר, כולל ההערות, הוראות הבטיחות והאזהרות, האיורים והמפרטים. יש ללמוד במיוחד את כל הוראות הבטיחות, האזהרות, המפרטים והפונקציות השונות של המוצר. התעלמות מהנחיה זו מובילה לסכנת התחשמלות, שריפה ופציעות קשות. שמור את הוראות ההפעלה, כולל כל הוראות הבטיחות והאזהרות לצורך שימוש בעתיד.
- הוראות ההפעלה המצורפות נכתבו בהתאם לידיעות הטכנולוגיות במועד השליחה לדפוס. את הגרסה העדכנית ביותר אפשר למצוא תמיד בדף המוצר של Hilti. כדי להגיע לשם, יש לסרוק את קוד ה-QR בהוראות ההפעלה האלה, מסומן בסמל .
 - אם אתה מעביר את המוצר לאדם אחר, מסור לו גם את הוראות ההפעלה האלה.

1.2 הסבר הסימנים

1.2.1 אזהרות

האזהרות מזהירות מפני סכנות בשימוש במוצר. במדריך זה מופיעות מילות המפתח הבאות:

סכנה 🛕

סכנה !

א מציינת סכנה מיידית, המובילה לפציעות גוף קשות או למוות. 🕨

אזהרה \Lambda

אזהרה !

א מציינת סכנה אפשרית, שיכולה להוביל לפציעות גוף קשות או למוות.

זהירות 🔬

זהירות !

א מציינת מצב שעלול להיות מסוכן ולהוביל לפציעות גוף או לנזקים לרכוש. 🕨

1.2.2 סמלים בהוראות ההפעלה

הסמלים הבאים מופיעים בהוראות הפעלה אלה:



1.2.3 סמלים באיורים

הסמלים הבאים משמשים באיורים:

מספרים אלה מפנים לאיור המתאים בתחילת הוראות הפעלה אלה.
 מספרים באיורים משקפים את רצף הפעולות, והם עשויים להיות שונים מרצף הפעולות המצוינות בטקסט.
 מספרי הפריטים מופיעים באיור סקירה ותואמים את המספרים במקרא בפרק סקירת המוצר.





סימן זה אמור לעורר את תשומת לבך המיוחדת בעת השימוש במוצר. 💽 💽

1.3 סמלים ספציפיים למוצר

1.3.1 סמלים על המוצר

הסמלים הבאים עשויים להופיע על המוצר:

\odot	השתמש במגני עיניים
$\boldsymbol{\varnothing}$	עבוד תמיד בשתי ידיים.
8	בעבודות חיתוך אין לעבודה עם מגן הדיסק הרגיל.
n ₀	מהירות סרק בקובה
/min	סיבובים לדקה
RPM	סיבובים לדקה
Ø	קוטר
Ū	המוצר תומך בטכנולוגיית NFC, התואמת את פלטפורמות iOS ו-Android.
Li-lon	סוללת ליתיום-יון
S *	- לעולם אין להשתמש בסוללה כפטיש.
4	אין להפיל את הסוללה. אין להשתמש בסוללה שנחבטה או שניזוקה באופן אחר.

1.4 פרטי המוצר

המוצרים של **התבעוום בו** מיועדים למשתמש המקצועי, ורק אנשים מורשים, שעברו הכשרה מתאימה, רשאים לתפעל, לתחדק ולתקן אותם. אנשים אלה חייבים ללמוד באופן מיוחד את הסכנות האפשריות. המוצר המתואר והעדרים שלו עלולים להיות מסוכנים כאשר אנשים שלא עברו הכשרה מתאימה משתמשים בהם באופן לא מקצועי או כאשר משתמשים בהם שלא בהתאם לייעוד. שם הדגם והמספר הסידורי מצוינים על לוחית הדגם.

רשום את המספר הסידורי בטבלה הבאה. בכל פנייה לנציגינו או למעבדת שירות יש לציין את נתוני המוצר.

נתוני המוצר

משחזת זווית נטענת	AG 6D-22-125
דור	01
מס' סידורי	

1.5 הצהרת תאימות

היצרן מצהיר באחריותו הבלעדית כי המוצר המתואר כאן עונה על דרישות החוק התקפות והתקנים התקפים. בסוף תיעוד זה ישנו צילום של הצהרת התאימות.

התיעוד הטכני שמור כאן:

Hilti Entwicklungsgesellschaft mbH | Zulassung Geräte | Hiltistraße 6 | 86916 Kaufering, Germany

2 בטיחות

בטיחות כלליות לכלי עבודה חשמליים 2.1

🛕 אזהרה קרא את כל הוראות הבטיחות, ההנחיות, האיורים והנתונים הטכניים המצורפים לכלי העבודה החשמלי. אי ציות להנחיות עלול להוביל להתחשמלות, לשרפה ו/או לפציעות קשות.

שמור את כל הוראות הבטיחות וההנחיות לעיון בעתיד.





המונח "כלי עבודה חשמלי" המשמש בהוראות הבטיחות מתייחס לכלי עבודה חשמליים המחוברים לרשת החשמל (עם כבל חשמל) או לכלי עבודה חשמליים המופעלים באמצעות סוללה נטענת (ללא כבל חשמל).

בטיחות במקום העבודה

- ◄ שמור על אזור העבודה שלך נקי ודאג לתאורה מספקת. חוסר סדר או תאורה לקויה במקום העבודה עלולים לגרום לתאונות.
- אין להפעיל את כלי העבודה החשמלי בסביבה שקיימת בה סכנת פיצוץ או שישנם בה נוזלים, גזים או אבק דליקים. כלי עבודה חשמליים יוצרים ניצוצות, שעלולים להצית את האבק או האדים.
- הרחק ילדים ואנשים אחרים מכלי העבודה החשמלי במהלך השימוש בו. אם דעתך תוסח אתה עלול לאבד את השליטה במכשיר.

בטיחות בחשמל

- תקע החשמל של כלי העבודה החשמלי חייב להתאים לשקע החשמל. אסור לשנות בשום אופן את תקע החשמל. אל תשתמש בשקע מתאם ביחד עם כלי עבודה חשמליים הכוללים הגנת הארקה. שימוש בתקעים חשמליים שלא עברו שינוי ושקעי חשמל מתאימים מפחית את הסיכון להתחשמלות.
- מנע מגע של הגוף בשטחים מוארקים כגון צינורות, גופי חימום, תנורים ומקררים. קיימת סכנה גבוהה להתחשמלות כאשר הגוף שלך מוארק.
 - הרחק כלי עבודה חשמליים מגשם או רטיבות. חדירת מים לכלי העבודה החשמלי מגדילה את הסיכון להתחשמלות.
- אל תשתמש בכבל החשמל למטרות שלא לשמן הוא נועד, לדוגמה: אל תרים את כלי העבודה החשמלי באמצעות הכבל ואל תנסה לנתק את התקע משקע החשמל במשיכה מהכבל. הרחק את הכבל מחום, שמן, פינות חדות או מחלקים נעים. כבלים שניזוקו או שהסתבכו בחלקים אחרים מגדילים את הסיכון להתחשמלות.
- כבל מאריך המיועד לשימוש חיצוני. שימוש בכבל מאריך המיועד לשימוש חיצוני. שימוש בכבל מאריך המתאים לשימוש חיצוני מפחית את הסיכוי להתחשמלות.
- אם לא ניתן להימנע משימוש בכלי העבודה החשמלי בסביבה לחה, השתמש בממסר פחת. השימוש בממסר פחת מפחית את הסיכון להתחשמלות.

בטיחות של אנשים

- היה ערני, שים לב למה שאתה עושה, ופעל בתבונה כאשר אתה עובד עם כלי עבודה חשמלי. אל תפעיל כלי עבודה חשמליים כשאתה עייף או תחת השפעת סמים, אלכוהול או תרופות. די ברגע אחד של חוסר תשומת-לב בזמן השימוש בכלי העבודה החשמלי כדי לגרום פציעות קשות.
- לבש תמיד ציוד מגן ומשקפי מגן. לבישת ציוד מגן אישי, כגון מסכת אבק, נעלי בטיחות מונעות החלקה, קסדת מגן או מגני שמיעה בהתאם לסוג השימוש בכלי העבודה החשמלי מקטינה את הסיכון לפציעות.
- מנע הפעלה בשוגג. ודא שכלי העבודה החשמלי כבוי לפני שאתה מחבר אותו לאספקת החשמל ו/או לפני שאתה מחבר את הסוללה ולפני הרמתו. אל תניח את אצבעך על המתג בזמן שאתה נושא את המכשיר ואל תחבר אותו לאספקת החשמל כאשר הוא מופעל, אחרת עלולות להיגרם תאונות.
- הרחק כלי כוונון או מפתחות ברגים לפני שאתה מפעיל את כלי העבודה החשמלי. כלי עבודה או מפתחות הנמצאים בקרבת חלקים מסתובבים עלולים לגרום פציעות.
- הימנע מתנוחות גוף לא נכונות. עמוד באופן יציב ושמור תמיד על שיווי משקל. כך תוכל לשלוט טוב יותר בכלי העבודה החשמלי במצבים לא צפויים.
- לבש בגדים מתאימים. אל תלבש בגדים רחבים או תכשיטים. הרחק את השער, הבגדים וכפפות מחלקים נעים. בגדים רופפים, תכשיטים ושיער ארוך עלולים להיתפס בחלקים נעים.
- כאשר ניתן להתקין התקני שאיבת אבק ולכידה יש לוודא שהם מחוברים לחשמל, ויש להקפיד להשתמש בהם בצורה נכונה. שימוש בהתקן שאיבת אבק מקטין את הסכנות הנובעות מהאבק.
- אל תהיה שאנן בנושאי בטיחות ואל תתעלם מהוראות בטיחות של כלי עבודה חשמליים, גם אם שהשתמשת במכשיר פעמים רבות ואתה מכיר אותו היטב. התנהגות רשלנית עלולה להוביל לפציעות קשות בתוך שניות.

שימוש וטיפול בכלי העבודה החשמלי

- אל תפעיל עומס רב מדי על המכשיר. השתמש בכלי העבודה החשמלי המתאים לעבודה שאתה מבצע. כלי העבודה החשמלי המתאים מבטיח לך עבודה טובה ובטוחה יותר בתחום ההספק הנקוב.
- אל תשתמש בכלי העבודה אם המתג שלו אינו תקין. כלי עבודה חשמלי שלא ניתן עוד להפעיל או לכבות אותו מהווה סכנה ויש לתקנו.
- בתק את תקע החשמל מהשקע ו/או הסר את הסוללה לפני שאתה מבצע כוונונים במכשיר, מחליף כלים או לאחר שאתה מפסיק לעבוד עם המכשיר. אמצעי זהירות זה מונע הפעלה בשוגג של כלי העבודה החשמלי.
- שמור כלי עבודה חשמליים שאינם בשימוש הרחק מהישג ידם של ילדים. אל תאפשר לאנשים שאינם יודעים כיצד להשתמש במכשיר או שלא קראו את ההוראות להשתמש במכשיר. כלי עבודה חשמליים הם מסוכנים כאשר משתמשים בהם אנשים חסרי ניסיון.
- טפל בכלי עבודה חשמליים ובאביזרים בהקפדה. בדוק אם החלקים הנעים פועלים בצורה חלקה ואינם נתקעים, אם ישנם חלקים שבורים או מקולקלים המשבשים את הפעולה התקינה של כלי העבודה החשמלי. לפני השימוש במכשיר דאג לתיקון חלקים לא תקינים. תאונות רבות נגרמו עקב תחזוקה לקויה של כלי עבודה חשמליים.
 - שמור על כלי החיתוך חדים ונקיים. כלי חיתוך מטופלים היטב, שלהביהם חדים נתקעים פחות וקלים יותר לתפעול.
- השתמש בכלי העבודה החשמלי, באביזרים, בכלי העבודה הנוספים וכן הלאה בהתאם להוראות אלה. התחשב בתנאי העבודה ובפעולה שעליך לבצע. שימוש בכלי העבודה החשמלי למטרות אחרות מאלה שלשמן הוא מיועד עלול להיות מסוכן.





שמור על ידיות ואזורי אחיזה בקיים מלכלוך משומן ומגריז. ידיות ואזורי אחיזה חלקים אינם מאפשרים תפעול בטוח ושליטה טובה בכלי העבודה החשמלי במצבים לא צפויים.

שימוש וטיפול בכלי עבודה נטענים

- טען את הסוללות רק במטענים שהומלצו על ידי היצרן. טעינה של סוללה במטען המיועד לטעינה של סוללות מסוג אחר עלולה לגרום לשרפה.
 - השתמש לשם כך רק בסוללות המתאימות לכלי העבודה החשמלי. שימוש בסוללות אחרות עלול לגרום לשרפות.
- שמור סוללות שאינן בשימוש הרחק ממהדקי נייר משרדיים, ממטבעות, מפתחות, מסמרים, ברגים או חפצים מתכתיים קטנים אחרים שיכולים לגשר בין המגעים. קצר בין מגעי הסוללה עלול לגרום לכוויות או לשרפה.
- שימוש שגוי עלול לגרום לדליפת נוזלים מהסוללה. אל תיגע בנוזלים אלה. אם נגעת בהם במקרה, שטוף את האזור במים. אם הנוזל נוגע בעיניים, פנה לרופא. נוזל סוללות שדלף עלול לגרום לגירויים בעור ולכוויות.
- אין להשתמש בסוללה ששונתה או שניזוקה. סוללות שניזוקו או שנערכו בהן שינויים עשויות להגיב בצורה לא צפויה ולגרום לשרפה, לפיצוץ ולפציעות.
- אין לחשוף סוללות לאש או לטמפרטורות גבוהות. אש או טמפרטורות גבוהות מ-130° (F) (265°F) עלולות לגרום לפיצוץ.
- ציית לכל ההנחיות הנוגעות לטעינה, ואף פעם אל תטען את הסוללה או את הכלי עם הסוללה בסביבה שהטמפרטורה בה נמצאת מחוץ לטווח המצוין בהוראות ההפעלה. טעינה שגויה או טעינה בטמפרטורה שנמצאת מחוץ לטווח המצוין בהוראות ההפעלה עלולה להרוס את הסוללה ולהגביר את הסיכון לשרפה.

שירות

- דאג לתיקון כלי העבודה החשמלי שלך רק בידי טכנאים מוסמכים, המשתמשים בחלקי חילוף מקוריים בלבד. כך תבטיח שמירה על בטיחות העבודה במכשיר.
 - אל תטפל בעצמך בסוללות שניזוקו. רק היצרן או מעבדה מורשית מטעמו רשאים לטפל בסוללות.

בנחיות בטיחות לכל העבודות 2.2

הנחיות בטיחות משותפות לעבודות ליטוש, ליטוש עם נייר ליטוש, עבודה עם מברשות ברזל וחיתוך:

- כלי עבודה חשמלי זה מיועד לשימוש כמשחזת, מלטשת נייר ליטוש, מברשת ברזל, מסור כוס ומסור דיסק. שים לב לכל הנחיות הבטיחות, ההוראות, האיורים והנתונים שקיבלת עם המכשיר. אם תתעלם מההנחיות הבאות, התוצאה עלולה להיות התחשמלות ו/או פציעות קשות.
- אסור להשתמש בכלי עבודה חשמלי זה להברקה. שימוש במכשיר שלא למטרה שלשמה הוא יועד מהווה סכנה ועלול לגרום לפציעות.
- אל תשנה את כלי העבודה החשמלי הזה כך שהוא יתפקד באופן שונה מכפי שנקבע במפורש על ידי יצרן כלי העבודה. שינוי מעין זה עלול להוביל אובדן השליטה בכלי ולפציעות קשות.
- אין להשתמש באביזרים שלא פותחו ואושרו על ידי היצרן במיוחד לשימוש בכלי עבודה חשמלי זה. העובדה שאפשר לחבר את האביזר לכלי העבודה החשמלי אינה מבטיחה שהשימוש בו יהיה בטוח.
- מהירות הסיבוב המותרת של הכלי המחובר חייבת להיות גבוהה לפחות כמו המהירות המרבית המצוינת על כלי העבודה החשמלי. כלי מחובר שמסתובב מהר מהמותר עלול להישבר ולהידרק בחלל.
- הקוטר החיצוני והעובי של הכלי המחובר חייבים להתאים לנתונים הדרושים לכלי העבודה שלך. אביזרים במידות לא מתאימות עלולים להיות לא מוגנים מספיק או לעבוד ללא שליטה.
- כלים בעלי חיבור עם תבריג חייבים להתאים בדיוק לתבריג שבציר המשחזת. בכלים הדורשים התקנה באמצעות אוגן, חייב קוטר הקדח של הכלי להתאים לקוטר הכניסה של האוגן. כלים שאינם מחוברים בצורה מדויקת לכלי העבודה החשמלי יסתובבו בצורה לא חלקה, ירעדו חזק מאוד ועלולים לגרום לאבדן שליטה על כלי העבודה.
- אין להשתמש בכלים פגומים. לפני כל שימוש באביזר כגון דיסק השחזה בצע בדיקה לאיתור שברים וסדקים, שחיקה או בלאי מוגבר, בדוק מברשות ברזל לאיתור חוטי ברזל משוחררים או שבורים. אם כלי העבודה או האביזר נופלים, בדוק אם הם ניזוקו או השתמש במקום זאת באביזר שלא ניזוק. לאחר שבדקת את הכלי וחיברת אותו, הרחק עצמך ואנשים הנמצאים בקרבת מקום אל מחוץ למישור התנועה של הכלי המסתובב, ואפשר למכשיר לעבוד דקה שלמה במהירות מרבית. אביזרים פגומים יישברו בזרך כלל במשך דקת הבדיקה.
- לבש ציוד מגן אישי. השתמש בהתאם לסוג העבודה במשקפי מגן או במגן פנים מלא. לבש מסכת אבק, מגני שמיעה, כפפות מגן או סינר מיוחד שיגן עליך מפני חלקיקי חומר בהתאם לצורך. יש להגן על העיניים מפני גופים דרים שעפים בחלל, כפי שעלול להתרחש בעבודות מסוימות. מסכת אבק ומסכת הנשימה צריכות לסנן אבק שנוצר במהלך השימוש. חשיפה ממושכת לרעש חזק עלולה לפגוע בשמיעה.
- ודא שאנשים אחרים עומדים במרחק בטוח מאזור העבודה. כל מי שנכנס לאזור העבודה חייב ללבוש ציוד מגן אישי. חלקים הנשברים מהחומר שבעבודה או שברים מהאביזר עלולים להתעופף בחלל ולגרום לפציעות גם מחוץ לאזור העבודה המידי.
- כאשר מבצעים עבודות שבהן הכלי עלול לפגוע בקווי חשמלי מוסתרים יש לאחוז בכלי העבודה החשמלי רק במקומות האחיזה המבודדים. מגע בקווים המוליכים זרם עלול להעביר זרם גם לחלקים מתכתיים במכשיר שלך ולגרום להתחשמלות.
- לעולם אין להניח את כלי העבודה החשמלי לפני שהכלי המחובר נעצר. כלי מסתובב עשוי להיתקל במשטח שעליו הוא מונח, ובעקבות זאת כלי העבודה החשמלי עלול לנוע ללא שליטה.
- אל תאפשר לכלי העבודה החשמלי לפעול אם אינך מחזיק אותו. הבגדים שלך עלולים להיתפס בכלי המסתובב, ובעקבות זאת הכלי עלול לחתוך בגופך.







- נקה באופן סדיר את חריצי האוורור של כלי העבודה החשמלי שלך. מפוח המנוע מושך אבק לגוף המכשיר, והצטברות כמות גדולה של אבק מתכתי מהווה סכנה חשמלית.
 - אין להשתמש בכלי העבודה החשמלי בקרבת חומרים דליקים. ניצוצות עלולים להצית אותם.
- אין להשתמש באביזרים הדורשים חומרי קירור נוזליים. שימוש במים או בחומרי קירור נוזליים אחרים עלול לגרום להתחשמלות.

רתע והנחיות בטיחות מתאימות

רתע הוא תגובה פתאומית עקב היתקעות או חסימה של כלי מסתובב, כגון דיסק השחזה, דיסק ליטוש, מברשת ברזל וכן הלאה. היתקעות או חסימה מובילים לעצירה פתאומית של הכלי המסתובב. עקב כך יאיץ כלי העבודה החשמלי, אם אינו נמצא בשליטה, לכיוון המנוגד של הכלי שנחסם.

כאשר לדוגמה דיסק השחזה נתקע או נחסם בחומר שבעבודה, הקצה של הדיסק שנכנס לחומר עשוי להילכד שם וכך לגרום לפריצת הדיסק או לרתע. הדיסק ינוע כעת לכיוון המפעיל או הרחק ממנו – בהתאם לכיוון הסיבוב של הדיסק במקום החסימה. הדיסק עלול גם להישבר במצב זה.

רתע נוצר כתוצאה משימוש שגוי בכלי העבודה החשמלי. ניתן למנוע אותו בעזרת אמצעי הזהירות המוסברים להלן.

- החזק את כלי העבודה החשמלי בשתי ידיים והבא גופך וזרועותיך לתנוחה שבה יוכלו לספוג את כוחות הרתע. השתמש תמיד בידית האחיזה הנוספת, אם קיימת, כדי שתהיה לך שליטה גדולה ככל האפשר על כוחות הרתע או מומנטי התגובה בעת האצת המכשיר. המשתמש יכול לשלוט בכוחות הרתע והתגובה אם ינקוט אמצעי זהירות מתאימים.
 - לעולם אל תקרב את ידך לכלי מסתובב. הכלי עלול לנוע מעל היד שלך במקרה של רתע.
- דאג שגופך לא יימצא בתחום שלכיוונו כלי העבודה החשמלי ינוע במקרה של רתע. הרתע מושך את כלי העבודה החשמלי לכיוון המנוגד לכיוון התנועה של הדיסק במקום החסימה.
- היה זהיר במיוחד בעבודה בפינות, על קצוות חדים וכן הלאה. מנע מצב שבו הכלי נהדף מהחומר בעבודה או נתקע בו. בפינות, בקצוות חדים או כאשר הכלי נהדף הוא נוטה להיתקע. זה גורם לאבדן שליטה או לרתע.
- א אל תשתמש בשרשראות או בדיסק ניסור משונן וכן בדיסק יהלום מחורץ בעל חריצים ברוחב גדול מ-10 מ"מ. כלים כאלה גורמים לעתים קרובות לרתע או לאבדן השליטה בכלי העבודה החשמלי.

הנחיות בטיחות מיוחדות להשחזה וחיתוך:

- השתמש אך ורק בכלי השחזה שאושרו לעבודה עם כלי העבודה החשמלי שלך וכן במגן דיסק המתאים לכלי ההשחזה. המגן אינו יכול להגן היטב מפני כלי השחזה שאינם מיועדים לכלי העבודה החשמלי שלך, ולפיכך הם אינם בטוחים.
- דיסקי השחזה קמורים צריכים להיות מותקנים באופן כזה שהשטח המשחיז שלהם לא יימצא מעל לגובה קצה מגן הדיסק. דיסק השחזה שהותקן בצורה לא נכונה ובולט מעבר לגובה קצה מגן הדיסק לא יהיה מוגן די הצורך.
- המגן צריך להיות מחובר בצורה בטוחה לכלי העבודה החשמלי, וכדי להבטיח רמת בטיחות מרבית עליו להיות מכוונן באופן שיותיר שטח כלי גלוי כמה שיותר קטן בכיוון המשתמש. מגן הדיסק עוזר להגן על המשתמש מפני שברים, מגע בשוגג בכלי ההשחזה וכן מפני ניצוצות שעלולים להצית את הבגדים.
- מותר להשתמש בגופי הליטוש וההשחזה רק לשימושים שלשמם הם אושרו. לדוגמה: לעולם אין להשחיז באמצעות פני השטח הצדיים של דיסק חיתוך. דיסקי חיתוך מיועדים להסרת חומר בעזרת קצה הדיסק. הפעלת כוח צדי עלולה לשבור את כלי ההשחזה.
- השתמש תמיד באוגן הידוק שאינו פגום, בגודל המתאים ובצורה המתאימה לדיסק ההשחזה שבחרת. אוגנים מתאימים תומכים בדיסק ההשחזה ומפחיתים את הסכנה לשבירת הדיסק. אוגנים לדיסקי חיתוך עשויים להיות שונים מאוגנים של דיסקים אחרים.
- אין להשתמש בדיסקי השחזה שחוקים של כלי עבודה חשמליים גדולים יותר. דיסקים של כלי עבודה חשמליים גדולים יותר אינם מיועדים למהירות סיבוב גבוהות של כלי עבודה חשמליים קטנים יותר ועלולים להישבר.
- השתמש תמיד במגן הדיסק המתאים לעבודה הספציפית כאשר אתה משתמש בגופי ליטוש והשחזה דו-צדדיים. שימוש במגן דיסק שגוי לא יספק הגנה מספיקה, מה שעלול להוביל לפציעות קשות.

הנחיות בטיחות נוספות מיוחדות לחיתוך:

- מנע חסימה של דיסק החיתוך ואל תפעיל כוח לחיצה רב. אל תבצע חתכים עמוקים מדי. עומס יתר על דיסק החיתוך מגביר את הסיכוי להיתקעות או לחסימה ובכך את הסיכון לרתע או לשבירת כלי ההשחזה.
- א אל תתקרב לאזור שלפני ומאחורי הדיסק המסתובב. במקרה של רתע כאשר דיסק החיתוך מסתובב בחלק שבעבודה, כלי העבודה החשמלי עלול להיזרק במהירות לכיוונך ביחד עם הדיסק.
- אם דיסק החיתוך נתקע או אם אתה מפסיק לעבוד, כבה את המכשיר והחזק אותו יציב עד שהדיסק בעצר לגמרי. לעולם אל תנסה למשוך את דיסק החיתוך מהחריץ בזמן שהוא עדיין מסתובב, אחרת עלול להתרחש רתע. ברר מה היא הסיבה להיתקעות וטפל בה.
- אל תפעיל מחדש את כלי העבודה החשמלי כל עוד הוא נמצא בתוך החלק שבעבודה. אפשר לדיסק החיתוך להגיע למהירות הסיבוב המרבית לפני שתמשיך בזהירות בחיתוך. אחר עלול הדיסק להיתקע, להיזרק אל מחוץ לחלק או לגרום לרתע.
- לוחות או חלקים גדול יש לתמוך כדי להפחית את הסיכון לרתע עקב היתקעות דיסק החיתוך. חלקים גדולים עשויים להתכופף תחת משקלם. יש לתמוך את החלק משני הצדדים של הדיסק, גם בקרבת מקום החיתוך וגם בקצה החלק.
- היה זהיר במיוחד בחיתוך "כיסים" בקירות קיימים או בחלקים דומים. כאשר הדיסק חודר ופוגע בצנרת גז, מים או חשמל או בעצמים אחרים הוא עלול לגרום לרתע.
- אל תנסה לחתוך חיתוך מעוגלים עומס יתר על דיסק החיתוך מגביר את הסיכוי להיתקעות או לחסימה ובכך את הסיכון לרתע או לשבירת כלי ההשחזה, מה שעלול להוביל לפציעות קשות.





הנחיות בטיחות מיוחדות לליטוש באמצעות נייר ליטוש:

השתמש רק בניירות לטש בגודל מתאים. ציית להוראות היצרן בנוגע לגודל ניירות הלטש. ניירות לטש הבולטים מדי מעבר לדיסק עלולים לגרום לפציעות וכן לחסימה ולקריעה של נייר הלטש וכן לרתע.

הנחיות בטיחות מיוחדות לעבודה עם מברשות ברזל:

- שים לב כי מברשות הברזל מאבדות סיבי תיל גם במהלך שימוש רגיל. אין להפעיל עומס מופרז על סיבי התיל. סיבי תיל מתעופפים יכולים לחדור בקלות את הבגדים ולתוך העור.
- כאשר יש חובה להתקין מגן דיסק, יש למנוע מגע בין מגן הדיסק לסיבי התיל של המברשת. הקוטר של דיסקים שטוחים וקמורים עשוי לגדול בעקבות הפעלת לחץ והכוח הצנטריפוגלי.

2.3 טיפול ושימוש קפדניים בסוללות נטענות

- שים לב להוראות הבטיחות הבאות בנושא טיפול בטוח ושימוש בטוח בסוללות ליתיום-יון. אי הקפדה עשוי להוביל לגירויים בעור, פציעות צריבה קשות, כוויות כימיות, לדליקה ו/או לפיצוץ.
 - השתמש רק בסוללות שנמצאות במצב טכני מושלם.
 - עפל בסוללות בהקפדה כדי למונע נזקים ולמנוע דליפה של נוזלים מסוכנים לבריאות!
 - בשום אופן אסור להכניס שינויים כלשהם בסוללות!
 - או לשרוף את הסוללות הנטענות. אין לפרק, למעוך, לחמם לטמפרטורה גבוהה מ-80°C (176°F) או לשרוף את הסוללות הנטענות.
- 🕨 אל תשמש או תטען סוללות שקיבלו מכה או ניזוקו בדרך אחרת. בדוק את הסוללות שלך באופן סדיר כדי לזהות סימני נזק.
 - בשום אופן אין להשתמש בסוללות ממוחזרות או מתוקנות.
 - לעולם אין להשתמש בסוללה או בכלי עבודה חשמלי המופעל בסוללה כפטיש.
- לעולם אין לחשוף את הסוללה לקרינת שמש ישירה, לטמפרטורה גבוהה, לניצוצות או ללהבה גלויה. זה עלול להוביל לפיצוץ.
- אל תיגע בקוטבי הסוללה באצבעותיך, באמצעות כלי עבודה, תכשיטים או באמצעות עצמים מוליכי חשמל אחרים. זה עלול לפגוע בסוללה כמו גם לגרום נזקי רכוש ופציעות.
 - רוסק סוללות מרטיבות ונוזלים. חדירת לחות עלולה לגרום קצר, התחשמלות, כוויות, דליקה ופיצוץ. ◄
- השתמש רק במטענים ובכלי עבודה חשמליים המיועדים לסוג סוללה זה. שים לב בנושא זה לדרישות המופיעות בהוראות ההפעלה המתאימות.
 - אין להשתמש בסוללה בסביבה נפיצה או לאחסן אותה בסביבה נפיצה.
- אם הסוללה חמה כל כך שלא ניתן לגעת בה, ייתכן שהיא אינה תקינה. הנח את הסוללה במקום לא דליק, גלוי, רחוק מספיק מחומרים דליקים. אפשר לסוללה להתקרר. אם כעבור שעה הסוללה עדיין חמה מדי לנגיעה, אז היא פגומה. פנה לשירות של Hilti או קרא את המסמך "הנחיות בנושא בטיחות ושימוש בסוללות ליתיום-יון של Hilti".

שים לב לתקנות המיוחדות החלות על הובלה, אחסון ושימוש בסוללות ליתיום-יון. ← עמוד 38

קרא את ההנחיות בנושא בטיחות ושימוש בסוללות ליתיום-יון של Hilti; אפשר להגיע אליהן דרך קוד ה-QR שבסוף הוראות אלה. הוראות אלה.

הוראות בטיחות נוספות 2.4

בטיחות של אנשים

- השתמש במוצר ובאביזרים רק בתנאי שהם נמצאים במצב טכני מושלם.
 - אל תבצע בשום אופן שינויים או מניפולציות במוצר או באביזרים.
 - . השתמש במגני שמיעה. רעש חזק עלול לפגוע בשמיעה.
- 🔹 אחוד את המוצר היטב תמיד בשתי ידיים בידיות האחיזה שלו. שמור על ידיות האחיזה יבשות, ונקיות מלכלוך שמן או גריז.
 - א כאשר מפעילים את המוצר ללא שאיבת אבק, יש ללבוש מסיכת נשימה קלה בעבודות היוצרות אבק. 🕨
- ערוך הפסקות תכופות ותרגילים לשיפור זרימת הדם לאצבעות. בעבודה ממושכת הרעידות החזקות מהמכשיר עשויות לגרום להפרעות בכלי הדם או במערכת העצבים של האצבעות, כפות הידיים או שורשי כף היד.
- אין לגעת בחלקים מסתובבים. הפעל את המוצר רק כשאתה נמצא באזור העבודה. נגיעה בחלקים מסתובבים, ובעיקר בכלים מסתובבים, עלולה לגרום לפציעות.
 - א המוצר אינו מיועד לאנשים חלשים ללא הכשרה מתאימה. הרחק את המוצר מהישג ידם של ילדים.
- אבק שנוצר במהלך ליטוש, השחזה, חיתוך או קידוח עלול להכיל כימיקלים מסוכנים. להלן כמה דוגמאות: עופרת או צבעים על בסיס עופרת; לבנים, בטון וחומרי קיר אחרים, אבן טבעית ומוצרים אחרים המכילים סיליקט; עצים מסוימים, כגון אלון, בוק ועץ שעבר טיפול כימי; אסבסט או חומרים המכילים אסבסט. יש למדוד את חשיפת המשתמש והאנשים בסביבה על פי דירוג הסכנה של החומרים שבהם עובדים. נקט את האמצעים הדרושים כדי לשמור את החשיפה ברמה בטוחה, לדוגמה פי דירוג הסכנה של החומרים שנותים למסוג להמינים מילימן על בסיס עופרת; לבנים, אחרים, אבן טבעית ומוצרים אחרים המכילים סיליקט; עצים מסוימים, כגון אלון, בוק ועץ שעבר טיפול כימי; אסבסט או חומרים המכילים אסבסט. יש למדוד את חשיפת המשתמש והאנשים בסביבה על פי דירוג הסכנה של החומרים שבהם עובדים. נקט את האמצעים הדרושים כדי לשמור את החשיפה ברמה בטוחה, לדוגמה שימוש במערכות שאיבת אבק או לבישת מסיכת נשימה מתאימה. להלן רשימה של אמצעים כלליים להפחתת החשיפה:
 - עבודה באזור מאוורר היטב. 🕨
 - רימנעות ממגע ממושך עם האבק.
 - סילוק האבק מהפנים והגוף.
 - לבישת ביגוד מגן ושטיפת אזורים חשופים במים וסבון.
- במהלך השימוש במוצר המשתמש ואנשים הנמצאים בקרבת מקום חייבים ללבוש משקפי מגן, קסדת עבודה ומגני שמיעה מתאימים.





- סכנת פציעה מכלי עבודה ו/או אביזרים נופלים. לפני תחילת העבודה בדוק שהסוללה והאביזר המותקן מחוברים היטב.
 - שמור על חריצי האוורור פנויים תמיד. סכנת כוויה כשחריצי האוורור מכוסים! .
 - הדלק את המכשיר רק לאחר שהבאת אותו לעמדת העבודה. •
 - המתן עד לעצירה מלאה של המוצר לפני שאתה מניח אותו. •
 - לבש נעלי בטיחות בעת החלפת כלי. מגע בכלי עלול לגרום לפציעות ולכוויות. 4
 - אם מתרחשת חריגה מגבולות הפעולה של המוצר או שהסוללה ריקה, ייתכן שהמכשיר לא ייבלם בכוח המנוע. 4

טיפול ושימוש קפדניים בכלי עבודה חשמליים

- יש לשמור דיסקי השחזה ולטפל בהם בהקפדה בהתאם להנחיות היצרן. 4
 - לעולם איו להשתמש במוצר ללא מגו דיסק. 4
- הדק את החלק שבעבודה. השתמש בהתקני הידוק או במלחציים כדי לייצב את החלק שבעבודה. כך החלק מיוצב טוב הרבה • יותר מאשר כשאתה מחזיק אותו בידך, ובנוסף לכך שתי ידיך נותרות פנויות לתפעול המוצר.
- לבש מגני שמיעה. השחזת פחים דקים או חומרים אחרים עם פני שטח גדולים ושרועדים בקלות עלול להוביל לרמת רעש 4 גבוהה הרבה יותר מערכי הרעש המצוינים. יש למנוע היווצרות רעש בחומרים כאלה באמצעים שונים, לדוגמה בעזרת לוחות בידוד כבדים וגמישים.
 - אין להשתמש בדיסקי חיתוך לצורך השחזה.
- הדק את הכלי ואת האוגו. אם הכלי והאוגו לא הודקו כראוי. ייתכו כי לאחר כיבוי המכשיר יתנתק הכלי מהציר עקב בלימת . המנוע.
 - איו לחבר את תפס החגורה למוצר זה. •

בטיחות בחשמל

- לפני תחילת העבודה יש לבדוק אם ישנם כבלי חשמל. צינורות גז או מים נסתרים. חלקים מתכתיים חיצוניים על המכשיר עלולים לגרום התחשמלות או פיצוץ כאשר פוגעים בכבל חשמל, בצינור גז או מים.
- מוצרים שהתלכלכו עקב עבודה תכופה בחומרים מוליכים יש להביא למעבדות של Hilti לבדיקה באופן סדיר. אבק שנדבק • לפני השטח של המכשיר, ובמיוחד אבק מחומרים מוליכים או לחות עלולים לגרום להתחשמלות.

מקום העבודה

- בעבודות פריצה יש לאבטח את האזור בצד הנגדי של מקום העבודה שלד. חומרים מעבודות הפריצה עשויים ליפול ולפצוע ארשים אחרים.
- א חיתוך חריצים בקירות תומכים או ברכיבים מבניים אחרים עשוי להשפיע על חודק המבנה, במיוחד בחיתוך של ברזל זיון או 🔸 קורות נושאות. לפני תחילת העבודה יש להתייעץ באדריכל. במנהל אתר הבנייה או בגורם אחראי אחר.

הוראות נוספות לשימוש במגו דיסק

כדי למנוע את הנזקים הבאים. יש להשתמש תמיד במגו הדיסק המתאים. ראה פרק: "התאמת הדיסקים לציוד שבשימוש".

- כאשר משתמשים במגן דיסק סטנדרטי עם כיסוי קדמי להשחזה שטוחה, מגן הדיסק עלול לגעת בחלק המעובד וכך לגרום לאובדן שליטה.
 - כאשר משתמשים במברשת ברזל עבה יותר מהעובי המרבי המותר. חוטי הברזל עלולים להילכד במגו הדיסק ולהישבר.
- כאשר משתמשים במגן דיסק סטנדרטי לעבודות חיתוך של מתכת עם דיסקי חיתוך-השחזה, קיים סיכון מוגבר להיווצרות ניצוצות וחלקיקים. ואם הדיסק נשבר עלולים להתעופף בחלל שברי דיסק.
- כאשר משתמשים במגן דיסק סטנדרטי עם או ללא כיסוי קדמי בעבודות חיתוך והשחזה של בטון או קירות. נוצר עומס אבק גבוה וסיכון מוגבל לאובדן השליטה במוצר, מה שיוביל לרתע.




סקירת המוצר 3.1



- לחצן שחרור מגן הדיסק
 - (2) לחצן נעילת ציר 3

1

- מתג הפעלה/כיבוי ננעל
 - (4) תצוגת מצב סוללה
 - (5) לחצן שחרור סוללה
 - 6 סוללה
 - 1 מגן ניצוצות (8)
 - חריצי אוורור (9)
- ידית אחיזה מרכזית עם חיישני Sens-Tech
 - 10 ידית אחיזה צדית
 - (11) תבריג פנימי עבור ידית אחיזה
 - (12) מגו דיסק רגיל עם כיסוי קדמי (13)
 - O אוגן נגדי עם טבעת
 - דיסק חיתוך / דיסק השחזה 14
 - (15) אום הידוק (16)
 - אום הידוק מהיר **Kwik lock** (אופציונלי)
 - (17) מפתח

שימוש בהתאם לייעוד 3.2

המוצר המתואר זו משחזת זווית ידנית המופעלת באמצעות סוללה נטענת. היא מיועדת לעבודות חיתוד והשחזה של חומרים מתכתיים ומינרליים, להברשה, לליטוש באמצעות נייר ליטוש וכן לקידוח באריחים – ללא שימוש במים.

- כאשר משתמשים במשחזת הזווית לחיתוך, חירוץ והשחזה של חומרים מינרליים חובה להשתמש במגן דיסק מתאים.
 - כאשר עובדים בחומרים מינרליים כגון בטון או אבן מומלץ להשתמש במגן שאיבה המותאם לשואב אבק של Hilti. .
- השתמש עבור מוצר זה רק בסוללות ליתיום-יוו של **Hilti** Nuron מסדרת הדגמים B 22. כדי להשיג ביצועים אופטימליים. Hilti ממליצה להשתמש עבור מוצר זה בסוללות המצוינות בסוף הוראות ההפעלה האלה.
- השתמש עבור סוללות נטענות אלה רק במטענים של Hilti מסדרות הדגמים המצוינות בטבלה בסוף הוראות הפעלה אלה.

3.3 מפרט אספקה

משחזת זווית, ידית אחיזה צדית, מגן דיסק סטנדרטי, כיסוי קדמי, אוגן נגדי, אום הידוק, מפתח, הוראות הפעלה. מוצרים נוספים המאושרים עבור המוצר שלד תמצא ב-Hilti Store מוצרים נוספים המאושרים עבור המוצר שלד

3D Active Torque Control (^{3D}ATC) 3.4

המוצר מצויד ב-**3D Active Torque Control** (^{3D}ATC).

אם המוצר מזהה במהלד העבודה תנועה פתאומית. לא צפויה. הוא ייכבה מיד אוטומטית.



אם ATC נכנסה לפעולה. המוצר יכבה ואז יופעל בחזרה.

2 SensTech פונקציית 3.5

מוצר זה מצויד בטכנולוגיית Hitti SensTech. באזורים (1) ו-(2) ישנם חיישני קרבה, המזהים אם כף היד של המשתמש נוגעת בגוף המוצר. המשתמש צריך לאחזו את ידית האחיזה היטב במלואה כדי לוודא שלפחות אחד מאזורי החישה יכוסה. כאשר כף

> עברית 29





היד מוסרת מגוף המוצר או כאשר כף היד אינה מכסה אף לא אחד מאזורי החישה, המוצר לא יידלק, או אם הוא פועל, הוא יכבה אוטומטית.

טכנולוגיית **SensTech** של**Hilt** זו מערכת המבוססת על קיבוליות חשמלית, אולם היא אינה יכולה להחליף שימוש בטוח במוצר או להחליף את הציות להוראות הבטיחות המפורטות בהוראות ההפעלה. לפני הפעלת המוצר יש לוודא שמשטחי האחיזה נקיים מנוזלים, לכלוך או חומרים מוליכים אחרים או חומרים המשפיעים על הקיבוליות (כגון שבבי מתכת).חומרים מוליכים אלה עלולים לפגוע בתפקוד של SensTech או לשבש אותו כליל.



לאחר שפונקציית SensTech נכנסה לפעולה, המוצר יכבה ואז יידלק מחדש.

פונקציית הגנה על המנוע 3.6

פונקציית ההגנה על המנוע מנטרת את צריכת החשמל כמו גם את התחממות המנוע ומגנה על המוצר מפני התחממות יתר. כאשר ישנו עומס יתר על המנוע עקב הפעלת כוח לחיצה חזק מדי, הספק המוצר יפחת משמעותית וייתכן אפילו שהוא ייעצר לגמרי.



אם עקב עומס יתר המוצר נעצר או שמהירות הסיבוב שלו פוחתת, יש להפחית את העומס על המוצר ולהמשיך להפעיל אותו במצב סרק במשך כ-30 שניות.

3.7 רלם מורנה

הבלם המובנה מפחית את זמן דעיכת מהירות הסיבוב של הכלי עד לעצירה.



פונקציה זו זמינה רק כל עוד ישנה אספקת חשמל למוצר. זמן הבלימה משתנה בהתאם לאביזר שנבחר.

כיסוי קדמי 🖸 3.8

ליישומים תחתונים יש להשתמש בכיסוי הקדמי עם מגן הדיסק הרגיל.

- עבודות השחזה עם דיסקי השחזה ישרים
 - עבודות חיתוך עם דיסקי חיתוך .

4 (אביזר) מגן שאיבת אבק (חיתוך) DC-EX מגן דיסק קומפקטי (אביזר) מגן שאיבת אבק (חיתוך) 3.9

השתמש במגן הקומפקטי DC-EX 125/5"C בעבודה על חומרים מינרליים ובעבודות הבאות:

חיתוך באמצעות דיסקי חיתוך יהלום

אסור לעבד מתכת עם מגן דיסק זה.



מגן שאיבת האבק מתאים רק לכלים בקוטר מקס' 125 מ"מ ("5).



מערכת ההשחזה מיועדת לליטוש מדדמן של חומרים מינרליים באמצעות דיסקי יהלום קעורים. אסור לעבד מתכת עם מגן דיסק זה.



מגן שאיבת האבק מתאים רק לכלים בקוטר מקס' 125 מ"מ ("5).

🖸 (אביזר) DC-EX מגן שאיבת אבק (חיתוך) אבידר) סכ-EX מגן שאיבת אבק (חיתוך) 3.11

מותר לבצע עבודות חיתוך וחירוץ בחומרים מינרליים רק עם מגן שאיבת אבק.

אסור לעבד מתכת עם מגן דיסק זה.



מגן שאיבת האבק מתאים רק לכלים בקוטר מקס' 125 מ"מ ("5).

תצוגות סלולת הליתיום-יון 3.12

סוללות ליתיום-יון של Hilti Nuron יכולות להציג את רמת הטעינה, הודעות שגיאה ואת מצב הסוללה.





3.12.1 תצוגות של רמת הטעינה והודעות שגיאה

אזהרה 🧥

סכנת פציעה עקב סוללה שנפלה!

א לאחר לחיצה על לחצן שחרור הנעילה בסוללה מחוברת, יש לוודא שהסוללה ננעלת בחזרה במקום.

כדי לראות אחת מהתצוגות האלה, לחץ קצרות על לחצן שחרור הסוללה.

רמת הטעינה כמו גם תקלות אפשריות יוצגו ברציפות כל עוד המוצר המחובר מופעל.

משמעות	מצב
רמת טעינה: 100% עד 71%	ארבע (4) נוריות מאירות ברציפות בירוק
רמת טעינה: 70% עד 51%	שלוש (3) נוריות מאירות ברציפות בירוק
רמת טעינה: 50% עד 26%	שתי (2) נוריות מאירות ברציפות בירוק
רמת טעינה: 25% עד 10%	נורית אחת (1) מאירה ברציפות בירוק
רמת טעינה: < 10%	נורית אחת (1) מהבהבת לאט בירוק
סוללת הליתיום-יון ריקה לגמרי. טען את הסוללה.	נורית אחת (1) מהבהבת מהר בירוק
אם הנורית ממשיכה להבהב גם לאחר טעינה סוללות, פנה לשירות של Hilti .	
סוללת הליתיום-יון או המוצר המחובר אליה חמים מדי, קרים מדי, תחת עומס-יתר או ישנה תקלה אחרת. הבא את המוצר והסוללה לטמפרטורת העבודה המומלצת, ואל תפעיל עומס מופרד על המוצר במהלך השימוש. אם ההודעה עדיין קיימת, פנה לשירות של Hilti.	נורית אחת (1) מהבהבת מהר בצהוב
סוללת הליתיום-יון והמוצר המחובר אליה אינם תואמים. אנא פנה למעבדת שירות של Hilti .	נורית אחת (1) מאירה בצהוב.
סוללת הליתיום-יון חוסמה, ואי אפשר להמשיך ולהשתמש בה. אנא פנה למעבדת שירות של Hilti .	נורית אחת (1) מהבהבת במהירות באדום

3.12.2 תצוגות של מצב הסוללה

כדי לבדוק את מצב הסוללה, החזק את לחצן השחרור לחוץ במשך יותר משלוש שניות רצופות. המערכת אינה מזהה תקלה פוטנציאלית בתפקוד הסוללה עקב שימוש לא נכון, לדוגמה נפילה, חתכים או נזקי חום חיצוניים וכן הלאה.

משמעות	מצב
אפשר להמשיך ולהשתמש בסוללה.	כל הנוריות מאירות כאור רץ, ולאחר מכן נורית אחת (1) מאירה ברציפות בירוק.
אי אפשר היה להשלים את בירור מצב הסוללה. חזור על התהליך או פנה לשירות של Hilti.	כל הנוריות מאירות כאור רץ, ולאחר מכן נורית אחת (1) מהבהבת מהר בצהוב.
אם עדיין אפשר להמשיך להשתמש במוצר המחובר, קיבולת הסוללה הנותרת נמוכה מ-50%. אם אי אפשר עוד להמשיך להשתמש במוצר המחובר, אז הסוללה נמצאת בסוף חיי השירות שלה ויש להחליף אותה. אנא פנה למעבדת שירות של Hilti .	כל הנוריות מאירות כאור רץ, ולאחר מכן נורית אחת (1) מאירה ברציפות באדום.

3.13 גאומטריה של דיסקי חירוץ יהלום מתאימים

דיסקי חירוץ היהלום צריכים לעמוד בדרישות הגאומטריות הבאות.

נתונים טכניים	
רוחב חריצים בין הסגמנטים (ז)	≤ 10 מ"מ
זווית חיתוך	שלילית









4 חומרים מתכלים

מותר להשתמש רק בדיסקי פיבר מחוזקים עם חומר מלכד שרף סינתטי 125 Ø מ"מ ("5), שאושרו לעבודות במהירות סיבוב של לפחות 11000 סל"ד ובמהירות היקף של 80 מ"/שנ'.

שים לב! לצורך חיתוך וחירוץ באמצעות דיסקי חיתוך יש להשתמש תמיד במגן דיסק סטנדרטי עם כיסוי קדמי נוסף או במגן שאיבת אבק שלם סגור.

כלים המתחברים למכשיר

קוטר מקס'	עובי מקס'	חומר לעיבוד	קוד	שימוש	
125 מ"מ	2.5 מ"מ	מתכתי	AC-D	חיתוך, חירוץ	דיסק השחזה-חיתוך
125 מ"מ	3 מ"מ	מינרלי	DC-TP, DC-D	חיתוך, חירוץ	דיסק חיתוך יהלום
			(SPX, SP, P)		
125 מ"מ	6.4 מ"מ	מתכתי	AG-D, AF-D,	השחזה	דיסק השחזה ליטוש
			AN-D		
125 מ"מ	-	מינרלי	DG-CW	השחזה	דיסק השחזה יהלום
			(SPX, SP, P)		
75 מ"מ	-	מתכתי	3CS, 4CS	מברשות פלדה	מברשת ברזל כוס
125 מ"מ	27 מ"מ		3SS, 4SS		מברשת דיסק
125 מ"מ	-	מינרלי	DD-M14	מקדח לאריחים	מקדח כוס יהלום
125 מ"מ	-	מתכתי	AP-D	השחזה	דיסק פיבר

התאמת הדיסקים לסוג העבודה

3CS/4CS 3SS/4SS DD-M14	DC-TP DC-D (SPX/SP/P)	DG-CW (SPX/SP/P)	AG-D AF-D AN-D	AP-D	AC-D	ציוד	פריט
1	1	1	1	1	1	מגן דיסק (סטנדרטי)	א
_	1	_	_	_	1	כיסוי קדמי (בשילוב עם א')	ב
_	_	1	_	_	_	מגן שאיבת אבק (השחזה) "DG-EX 125/5	ډ
-	1	_	_	_	_	מגן שאיבת אבק (חיתוך) DC-EX 125/5"C (בשילוב עם א')	т
_	1	_	_	_	_	מגן שאיבת אבק (חירוץ) DC-EX 125/5"M	ה
_	1	_	_	_	_	DC-EX SL מתאם (בשילוב עם ה')	1
•	1	1	1	1	1	ידית אחיזה צדית (סטנדרטי)	Ţ
1	1	1	1	1	1	DCBG ידית קשת DCBG ידית קשת (אופציונלי ל-ז')	n
_	1	1	1	_	1	אום הידוק (סטנדרטי)	ט
_	1	1	1	_	1	אוגן נגדי (סטנדרטי)	٦
_	1	_	1	_	1	Kwik lock (אופציונלי ל-ל'	C
_	_	_	_	1	_	אום הידוק (דיסק פיבר)	ל
_	_	_	_	1	_	צלחת (דיסק פיבר)	מ





5 נתונים טכניים

5.1 מאפייני המוצר

משקל לפי EPTA Procedure 01 ללא סוללה	2.0 ק"ג
מתח נקוב	21.6 וולט
סל"ד נקוב	8,500 סל"ד
קוטר דיסק מרבי	125 מ"מ
ציר-תבריג	M14
אורך ציר	22 מ"מ
קוטר מרבי של מקדח הכוס	125 מ"מ
טמפרטורת סביבה בעבודה	60 °C −17 °C
טמפרטורת אחסון	70 °C −20 °C

5.2 סוללה נטענת

מתח עבודה עם סוללה נטענת	21.6 וולט
משקל הסוללה	ראה בסוף הוראות ההפעלה האלה
טמפרטורת סביבה בעבודה	60 °C −17 °C
טמפרטורת אחסון	40 °C −20 °C
טמפרטורת הסוללה בתחילת הטעינה	45 °C −10 °C

EN 62841 מידע על רעש וערכי רעידות לפי 5.3

ערכי לחץ הקול והרעידות המצוינים בהוראות אלה נמדדו בהתאם לנוהל המדידה התקני, וניתן להשתמש בהם לצורך השוואה בין כלי עבודה חשמליים. הם מתאימים גם להערכה זמנית של העומסים.

הנתונים המצוינים תקפים לשימושים העיקריים בכלי העבודה החשמלי. אולם אם משתמשים בכלי העבודה החשמלי לשימושים אחרים, בשילוב אביזרים אחרים או אם המכשיר אינו עובר תחזוקה מספקת, הנתונים עשויים להשתנות. בעקבות זאת פריסת העומסים למשך זמן העבודה כולו עשויה להיות גבוהה באופן משמעותי.

לצורך הערכה מדויקת של העומסים יש לקחת בחשבון גם את הזמנים שבהם כלי העבודה כבוי או שבהם הוא אמנם פועל אך אינו בשימוש בפועל. בעקבות זאת פריסת העומסים למשך זמן העבודה כולו עשויה להיות נמוכה באופן משמעותי.

יש לקבוע הנחיות בטיחות נוספות להגנה על המשתמש מפני ההשפעות של קול ו/או רעידות, כגון: תחזוקה של כלי העבודה החשמלי ושל כלי העבודה המחוברים, שמירה על ידיים חמות, ארגון תהליכי העבודה.

השחזת פחים דקים או חומרים אחרים עם פני שטח גדולים ושרועדים בקלות עלול להוביל לרמת רעש גבוהה הרבה יותר מערכי הרעש המצוינים. יש למנוע היווצרות רעש בחומרים כאלה באמצעים שונים, לדוגמה בעזרת לוחות בידוד כבדים וגמישים. כאשר מבצעים הערכת סיכונים של חשיפה לרעש, יש לקחת בחשבון תמיד גם את הערכים המוגדלים האלה.

מידע על רעשים

	AG 6D-22-125
מפלס לחץ קול (L _{pA})	86 dB(A)
(K _p ₄) אי-ודאות רמת לחץ קול	3 dB(A)
רמת הספק קול (L _{wa})	94 dB(A)
(K _{wa}) אי-ודאות ברמת הספק הקול	3 dB(A)

מידע על רעידות

שימושים אחרים, כגון חיתוך, עשויים לגרום לערכי רעידות אחרים.

AG 6D-22-125		
4.2 מ'/שנ' ²	B 22-55	(a _{h,AG}) ליטוש פני שטח עם ידית מפחיתת רעידות
6.4 מ'/שנ' ²	B 22-255	
2.7 מ'/שנ ^{י2}	B 22-55	(a _{h,DS}) ליטוש באמצעות נייר ליטוש עם ידית מפחיתת רעידות
2°מ'/שנ' 3.7	B 22-255	
1.5 מ'/שנ' ²		(K) אי ודאות





6 הכנה לעבודה

אזהרה 🛕

סכנת פציעה עקב התחלת תנועה בשוגג!

- לפני חיבור הסוללה ודא שהמוצר כבוי.
- ▶ הסר את הסוללה לפני שאתה מבצע כוונונים כלשהם במכשיר או מחליף אביזרים.

ציית להוראות הבטיחות והאזהרות שבתיעוד זה ולאלה המצוינות על המוצר.

6.1 טעינת סוללה

- .1. קרא את הוראות ההפעלה של המטען לפני הטעינה.
- .2 ודא שהמגעים של הסוללה ושל המטען נקיים ויבשים.
 - 29 טען את הסוללה במטען מאושר. ← עמוד 3.

6.2 חיבור הסוללה

אזהרה 🧥

סכנת פציעה עקב קצר או נפילת סוללה!

- לפני חיבור הסוללה ודא שהמגעים של הסוללה ושל המוצר נקיים מגופים זרים.
 - ודא תמיד שהסוללה תפוסה היטב.
 - .) טען את הסוללה למצב מלא לגמרי לפני השימוש הראשון.
 - .2 דחף את הסוללה למוצר עד שאתה שומע אותה ננעלת.
 - .3 ודא שהסוללה יושבת היטב.

6.3 הסרת הסוללה

- .1 לחץ על לחצן השחרור של הסוללה.
- .2 משוך את הסוללה החוצה מהמוצר.

אופציונלי) Hilti התקנת רצועת אבטחה של 6.4

בעת העבודה במוצר יש לציית לתקנות במדינתך בנוגע לעבודה במקומות גבוהים. שים לב להוראות ההפעלה של רצועת האבטחה.

- . הנח את שתי הלשוניות של רצועת האבטחה בצורה מדויקת על לוחית ההגנה מפני ניצוצות.
- . חבר את רצועת האבטחה באמצעות הברגים המתאימים דרך הקדחים המתאימים בלוחית ההגנה מפני ניצוצות.
 - 34 חבר את הסוללה. ← עמוד 34.

6.5 אבטחת נפילה

אזהרה 🥂

1

1

סכנת פציעה כשכלי העבודה ו/או האביזר נופלים!

- השתמש רק בחבל אבטחה של Hilti המומלץ עבור המוצר שלך.
- בדוק את נקודת החיבור של חבל האבטחה של כלי העבודה לפני כל שימוש כדי לזהות נדקים.

שים לב להוראות השימוש של חבל אבטחת כלי העבודה של Hilti.

מותר לאבטח מוצר זה אך ורק באמצעות שילוב של רצועת האבטחה של Hilti עם חבל האבטחה 2261970# של Hilti.

- ▲ חבר את רצועת האבטחה כמוסבר בפרק התקנת רצועת האבטחה של 34 דומע ← Hilti. בדוק שהחיבור יציב.
- חבר שאקל אחד של חבל אבטחת כלי העבודה לרצועת האבטחה ואת השאקל השני למבנה יציב. בדוק ששני השאקלים מחוברים בצורה בטוחה.

שים לב להוראות הבטיחות של רצועת האבטחה של Hilti ושל חבל אבטחת כלי העבודה של Hilti.







6.6 התקנת ידית האחיזה הצדית

. הברג את ידית האחיזה הצדית לאחד מהתבריגים המיועדים לכך.

6.7 התקנה או הסרה של מגן הדיסק

זהירות 🔬

1

סכנת פציעה. הכלי עשוי להיות חם מאוד או חד.

- לבש כפפות מגן בעת ביצוע עבודות התקנה, פירוק, כוונון ותיקון תקלות.
 - שים לב להוראות ההתקנה של מגן הדיסק.

🛚 התקנת מגן דיסק (סטנדרטי) 6.7.1

הקידוד על מגן הדיסק מוודא שניתן יהיה להתקין רק מגן דיסק המתאים למוצר. מגן הדיסק נע ביחד עם זיזי ההתאמה בתושבת מגן הדיסק של המוצר.

- מקם את מגן הדיסק על צוואר הציר כך ששני הסימונים המשולשים במגן למוצר זה מול זה.
 - .2 דחף את מגן הדיסק על צוואר הציר.
 - לחץ על לחצן שחרור המגן וסובב את מגן הדיסק למיקום הרצוי עד שהוא ננעל.
 - כפתור שחרור המגן קופץ בחזרה.

(סטנדרטי) כוונון מגן הדיסק (סטנדרטי) 6.7.2

לחץ על לחצן שחרור המגן וסובב את מגן הדיסק למיקום הרצוי עד שהוא ננעל.

הסרת מגן דיסק (סטנדרטי) 6.7.3

- לחץ על לחצן שחרור המגן והחזק אותו לחוץ, סובב את מגן הדיסק עד ששני הסימונים המשולשים, על מגן הדיסק ועל המוצר, נמצאים זה מול זה.
 - .2 הסר את מגן הדיסק

6.8 התקנה או הסרה של הכיסוי הקדמי 🖸

יש לנעוץ את הכיסוי הקדמי על מגן הדיסק הסטנדרטי.

- הרכב את הכיסוי הקדמי על מגן הדיסק הסטנדרטי כאשר הצד הסגור פונה כלפי מעלה.
 - 🔹 הנעילה חייבת להינעל בצליל נקישה ברור.
 - .2 להסרה פתח את הנעילה של הכיסוי הקדמי.
 - הסר את הכיסוי הקדמי ממגן הדיסק הסטנדרטי.

6.9 התקנה והסרה של כלי העבודה

זהירות 🔬

1

סכנת פציעה. הכלי עלול להיות חם מאוד.

- לבש כפפות מגן בעת החלפת כלי. 🕨
- יש להחליף דיסקי יהלום ברגע שהספק החיתוך/ההשחזה פוחת באופן ניכר. בדרך כלל זה מתרחש כאשר גובה סגמנטי 📔 יש היהלום נמוך מ-2 מ"מ.

סוגי דיסק אחרים יש להחליף ברגע שהספק החיתוך פוחת באופן ניכר או אם במהלך העבודה נוצר מגע בין חלקים של משחזת הזווית (מלבד הדיסק) לבין החומר שבעבודה.

דיסקי ליטוש יש להחליף כשמגיע תאריך התפוגה שלהם.

6.9.1 התקנת כלי **10**

אזהרה 🧥

סכנת פציעה. בעת בלימת מנוע המכשיר עלול הכלי המחובר להתנתק.

- המתן עד שהכלי המחובר נעצר ורק אז אחוז בכלי או באום ההידוק. 🕨
- 🔹 הדק את הכלי ואת האוגן הנגדי בעזר האום במידה כזו שבעת בלימה המנוע לא ישתחררו חלקים.





- .1 נקה את האוגן הנגדי ואום ההידוק.
- .ידא שטבעת ה-O נמצאת באוגן הנגדי ושהיא תקינה לגמרי. 2.
 - החלף טבעת O שניזוקה והשלם טבעת O חסרה.
 - חבר את האוגן הנגדי לציר המשחזת כך שלא יסתובב.
 - .4 חבר את האביזר
 - .5 סובב את אום ההידוק על הציר.
 - .6 לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
 - .7 הדק את אום ההידוק בעזרת המפתח.

6.9.2 הסרת כלי

אזהרה 🤺

סכנת שבירה והרס. לחיצה על לחצן נעילת הציר בזמן שהציר מסתובב עלולה לגרום לשחרור הכלי המחובר. ◄ לחץ על לחצן נעילת הציר רק כאשר הציר אינו מסתובב.

- .1 לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
- . חבר את המפתח וסובב אותו נגד כיוון השעון כדי לשחרר את אום ההידוק המהיר.
 - . שחרר את לחצן נעילת הציר והוצא את הכלי. 3.

11 Kwik lock התקנת 6.9.3

אדהרה 🥂

- סכנת שבירה. עקב שחיקה מרובה עלולה אום ההידוק המהיר Kwik lock להישבר.
- אודא שבמהלך העבודה לא נוצר מגע בין אום ההידוק המהיר Kwik lock לחומר שבעבודה.
 - אם הוא פגום. אין להשתמש באום הידוק מהיר Kwik lock אם הוא פגום.

במקום אום הידוק אפשר להשתמש באום הידוק מהיר **Kwik lock.** כך ניתן להחליף כלי ההשחזה/חיתוך ללא שימוש 🛐 בכלי עבודה.

- .1 נקה את האוגן הנגדי ואום ההידוק.
- .2 ודא שטבעת ה-O נמצאת באוגן הנגדי ושהיא תקינה לגמרי.
 - החלף טבעת O שניזוקה והשלם טבעת O חסרה.
 - .2 חבר את האוגן הנגדי לציר המשחזת כך שלא יסתובב.
 - .4 חבר את האבידר
- .5. הברג את אום ההידוק המהיר Kwik lock עד שהיא נצמדת לכלי.
 - אריתוב **Kwik lock** אריך להיות גלוי כשהאום מוברגת.
 - לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
- מתהדקת. **Kwik lock** סובב את הכלי ידנית בכוח בכיוון השעון עד שאום ההידוק המהיר 7.
 - .8 הרפה מלחצן נעילת הציר.

Kwik lock פירוק 6.9.4

אם אינך מצליח לשחרר את אום ההידוק המהיר **Kwik lock ב**ידך, השתמש במפתח וסובב את המפתח נגד כיוון השעון. לעולם אין להשתמש במפתח צינורות. שימוש בכלי עבודה לא מתאים עלול לפגוע באום ההידוק המהיר **Kwik lock**.

- .1 לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
- . שחרר את אום ההידוק המהיר Kwik lock באופן הבא: סובב בידך את אום ההידוק המהיר נגד כיוון השעון.
 - שחרר את לחצן נעילת הציר והוצא את הכלי.

6.10 התקנת מקדח כוס 12

- 1. חבר את ידית האחיזה הצדית. → עמוד 35
- 35 התקן את מגן הדיסק הסטנדרטי. → עמוד 35.
 - . חבר את מקדח הכוס והברג אותו ידנית.
- 4. לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
- .5 הדק את מקדח הכוס באמצעות מפתח ברגים מתאים.
- 6. לאחר מכן שחרר את לחצן נעילת הציר והסר את המפתח.





6.11 התקנת מברשת פלדה 🚹

- 1. חבר את ידית האחיזה הצדית. ← עמוד 35
- .2 התקן את מגן הדיסק הסטנדרטי. ← עמוד 35
- חבר את מברשת הפלדה והברג אותה ידנית.
 - .4. לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
- .5. הדק את מברשת הפלדה באמצעות מפתח ברגים מתאים.

6.12 התקנת דיסק פיבר

- 1. חבר את ידית האחיזה הצדית. → עמוד 35
- 35 התקן את מגן הדיסק הסטנדרטי. ← עמוד 32.
- .7 חבר את הצלחת ואת דיסק הפיבר והברג והדק את אום ההידוק.
 - לחץ על לחצן נעילת הציר והחזק אותו לחוץ.
 - .5 הדק את אום ההידוק בעזרת המפתח.

7 תפעול

ציית להוראות הבטיחות והאזהרות שבתיעוד זה ולאלה המצוינות על המוצר.

זהירות 🔬

סכנת פציעה עקב חומרים קיבוליים! חומרים המשפיעים על הקיבוליות עלולים לשבש את התפקוד של Sens-Tech. במקרה זה ייתכן שהמוצר לא כבה גם לאחר שעוזבים את ידית האחיזה.

- יש לכבות את המוצר תמיד באמצעות מתג ההדלקה/כיבוי לפני שמניחים אותו.
 - יש לשמור על משטחי החישה נקיים ויבשים. 🕨
- יש לשמור על מרחק מספיק, כ-10 מ"מ, מחומרים המשפיעים על הקיבוליות.
 - איה ערני תמיד, והישמע תמיד להוראות הבטיחות. 🕨

הפעלה או כיבוי 15 7.1

הפעלה

הקפד להחזיק את המוצר במקומות המיועדים לכך. כאשר המשתמש אינו מקיף את ידית האחיזה הראשית במלואה או שהוא עוזב אותה, המוצר יכבה אוטומטית. אם פונקציית**Sens-Tech ה**גיבה, המוצר יכבה ואז יופעל בחזרה.

- לחץ על החלק האחורי של מתג ההפעלה/כיבוי והחזק אותו לחוץ.
 - 2. דחף את מתג ההפעלה/כיבוי קדימה.
 - רמנוע פועל. 🕨
 - 3. נעל את מתג ההפעלה/כיבוי.

כיבוי

- .4. לחץ על החלק האחורי של מתג ההפעלה/כיבוי.
- מתג ההפעלה/כיבוי קופץ למיקום כבוי והמנוע כבה.

7.2 השחזה

זהירות 🔬

סכבת פציעה. הכלי עלול להיתקע בפתאומיות.

אחוז במוצר תמיד בעזרת ידית האחיזה הצדית (כאופציה ישנה ידית קשת) והחזק אותו היטב בשתי ידיים.

הקפד שהאביזר המחובר אינו נתקע, והימנע מהפעלת לחץ מופרז על המוצר.

7.3 חיתוך

2

בעת החיתוך הפעל כוח דחיפה מתון ועבוד בצורה ישרה עם המוצר (זווית עבודה כ-90° לפני השטח של החומר שאתה חותך).

הדרך הטובה ביותר לחתוך פרופילים וצינורות מרובעים קטנים היא לעבוד במקום בעל הקוטר הקטן ביותר.





7.4 השחדה

אזהרה 🧥

- . סכנת פציעה. דיסק החיתוך עלול להתפוצץ, כך שחלקים ממנו יתעופפו ויגרמו לפציעות.
 - לעולם אין להשתמש בדיסקי חיתוך לצורך עבודות השחזה.
 - הזז את המוצר מצד לצד בזווית גישה של ⁵0 עד 30° תוך הפעלת לחץ מתון.
 - החלק שבעבודה לא יתחמם מדי, לא ישנה את צבעו ולא ייווצרו חריצים. 🔸

8 טיפול ותחזוקה

אזהרה 🥂

סכנת פציעה כאשר הסוללה מחוברת !

לפני ביצוע עבודות טיפול ותחזוקה כלשהן יש להקפיד להסיר את הסוללה!

סכנה 🛕

התחשמלות עקב בידוד חסר. בתנאי עבודה קיצוניים ייתכן שאבק מתכות מוליך (כגון סיבי פחמן, מתכת) יתיישב בתוך המכשיר ויפגע בבידוד המגן.

- בתנאי עבודה קיצוניים יש להשתמש במערכת שאיבת אבק נייחת.
 - 🕨 נקה את חריצי האוורור באופן סדיר.

טיפול במוצר

- הסר בזהירות לכלוך דבוק.
- י בקה את גוף המכשיר רק באמצעות מטלית לחה מעט. אל תשתמש בחומרי טיפול המכילים סיליקון, מאחר שהם עלולים לפגוע בחלקי הפלסטיק.
 - נקה את המגעים באמצעות מטלית נקייה ויבשה.

טיפול בסוללות ליתיום-יון

- לעולם אין להשתמש בסוללה שחריצי האוורור שלה סתומים. נקה את חריצי האוורור בזהירות בעזרת מברשת רכה ויבשה.
- מנע חשיפת הסוללה לאבק ולכלוך שלא לצורך. בשום אופן אין לחשוף את הסוללה ללחות גבוהה (לדוגמה להטביל אותה במים או להניח אותה בגשם).
 - אם הסוללה נרטבה מאוד, יש להתייחס אליה כאלה סוללה פגומה. בודד אותה במיכל לא דליק ופנה לשירות של Hilti.
- שמור על הסוללה נקייה משמן וגריד לא שייכים. אל תאפשר הצטברות מיותרת של לכלוך ואבק על הסוללה. נקה את הסוללה במטלית יבשה ורכה או במטלית נקייה ויבשה. אל תשתמש בחומרי טיפול המכילים סיליקון, מאחר שהם עלולים לפגוע בחלקי הפלסטיק.

אל תיגע במגעים של הסוללה ואל תסיר מהמגעים גריז שהושם במפעל.

 נקה את גוף המכשיר רק באמצעות מטלית לחה. אל תשתמש בחומרי טיפול המכילים סיליקון, מאחר שהם עלולים לפגוע בחלקי הפלסטיק.

תחזוקה

- בדוק באופן סדיר את כל החלקים הגלויים כדי לאתר נזקים ולוודא שכל הרכיבים פועלים באופן תקין.
- אל תפעיל את המוצר אם ישנם נדקים ו/או תקלות. פנה מיד לשירות של Hilti כדי לתקן את המוצר.
- לאחר עבודות טיפול ותחזוקה יש להתקין בחזרה את כל ציוד ההגנה ולבדוק שהוא פועל בצורה תקינה.

לצורך הפעלה בטוחה של המכשיר יש להשתמש רק בחלקי חילוף וחומרים מתכלים מקוריים. את חלקי החילוף, החומרים המתכלים והאביזרים שאושרו על-ידי Hilti. עבור המוצר שלך תמצא ב-Wiki שלך או בכתובת: www.hilti.group

הובלה ואחסון של כלי עבודה נטענים וסוללות 9

הובלה

זהירות 🔬

התחלת פעולה בשוגג במהלך הובלה !

- יש להוביל את המכשיר כשהסוללה מנותקת ממנו!
 - רוצא את הסוללה/ות. ◄
- לעולם אין להוביל את הסוללה בצורה חופשית בין עצמים לא ארוזים. בזמן ההובלה הסוללות צריכות להיות מוגנות מפני חבטות ורעידות רבות וכן מבודדות מפני חומרים מוליכים כלשהם או סוללות אחרות, כדי שלא ייווצר מגע בינן לבין מגעים של סוללות אחרות ועקב כך קצר. שים לב לכללי ההובלה במדינתך בנוגע לסוללות.
 - אסור לשלוח סוללות בדואר. אם אתה רוצה לשלוח סוללות לא פגומות, פנה לשם כך לחברת משלוחים והובלות.





- בדוק אם ישנם נזקים במוצר ובסוללות לפני כל שימוש וכן לפני הובלה ארוכה.

אחסון

אזהרה \Lambda

בזק לא מכוון כשהסוללות פגומות או דולפות !

- יש לאחסן את המכשיר כשהסוללה מנותקת ממנו! 🕨
- אחסן את המוצר והסוללות במקום קריר ויבש. שים לב לערכי הגבול של הטמפרטורה, כמצוין בנתונים הטכניים. 🕨
 - אין לאחסן סוללות על המטען. הקפד להוציא את הסוללה מהמטען בסיום תהליך הטעינה. 🕨
 - לעולם אין לאחסן סוללות בשמש, על מקורות חום או מאחורי זכוכית. 🕨
 - אחסן את המוצר והסוללה הרחק מהישג ידם של ילדים או אנשים לא מורשים.
 - בדוק אם ישנם נזקים במוצר ובסוללות לפני כל שימוש וכן לפני אחסון ממושך.

10 תיקון תקלות

בכול תקלה שים לב לתצוגות של רמת הטענה ושל התקלות בסוללה. ראה הפרק **תצוגות של סוללת הליתיום-יון.** אם מתרחשת תקלה שאינה מוסברת בטבלה זה או שאינך יכול לתקן בעצמך, פנה לשירות של Hilt<mark>t.</mark>

תרון	פו	סיבה אפשרית	תקלה
כבה את מתג ההדלקה/כיבוי ונקה ויבש את משטחי החיישנים.	٩	משטח החישה מלוכלך ו/או רטוב	המוצר לא נכבה כאשר עוזבים את ידית האחיזה.
כבה את מתג ההדלקה/כיבוי.	۲	משטח החישה עדיין מזהה את כף היד של המשתמש	
כבה את מתג ההדלקה/כיבוי והגדל את המרחק (≥ 10 מ"מ) בין משטחי החישה לחומרים קיבוליים.	•	משטחי החישה נכנסו לפעולה עקב צימוד קיבולי.	
החלף סוללה, וטען את הסוללה הריקה.	•	הסוללה התרוקנה.	אי אפשר להפעיל את המוצר.
החזק את המוצר בצורה נכונה בידית האחיזה המרכזית.	•	אינך אוחז נכון בידית האחיזה.	
כבה את המוצר והדלק אותו מחדש. ← עמוד 37 החזק את המוצר בצורה נכונה בידית האחיזה המרכזית	•	אינך אוחז נכון בידית האחיזה.	המוצר נכבה באופן לא צפוי.
אפשר לסוללה להתחמם בהדרגה לטמפרטורת החדר.	•	טמפרטורת סביבה נמוכה מאוד.	הסוללה מתרוקנת מהר מהרגיל.
נקה את זיז הנעילה וחבר את הסוללה מחדש.	•	זיז הנעילה בסוללה מלוכלך.	הסוללה אינה נתפסת בצליל "קליק" ברור.
כבה מיד את המוצר, הוצא את הסוללה, השגח עליה, אפשר לה להתקרר וצור קשר עם השירות של Hilti.	•	תקלה חשמלית	התחממות רבה של משחזת הזווית או הסוללה.
נקה את חריצי האוורור באופן סדיר.	٩	חריצי אוורור סתומים	
החלף סוללה, וטען את הסוללה הריקה.	•	הסוללה התרוקנה.	אין בלימת מנוע.
כבה את המוצר והדלק אותו מחדש.	•	עומס יתר זמני על המוצר.	

11 סילוק

אזהרה 🕂

סכנת פציעה בעקבות סילוק לא תקין! סכנה בריאותית מהשתחררות גזים ונוזלים.

- אין לשלוח סוללות פגומות! 🕨
- כסה את החיבורים באמצעות חומר לא מוליך, כדי למנוע קצר. 🕨
 - סלק סוללות כך שהן לא יוכלו להגיע לידיהם של ילדים.
- סלק את הסוללה ב-Hilti Store או פנה לחברת המיחזור האחראית.

אים המוצרים של Hilti מיוצרים בחלקם הגדול מחומרים ניתנים למיחזור. כדי שניתן יהיה למחזרם דרושה הפרדת חומרים או ממ מקצועית. במדינות רבות Hilti תקבל את המכשיר הישן שלך בחזרה לצורך מיחזור. פנה לשירות של Hilti או למשווק.





אחריות יצרן 12

X

. אם יש לך שאלות בנושא תנאי האחריות, אנא פנה למשווק Hilti הקרוב אליך.

13 מידע נוסף

מידע על נוסף הבא: בקישור תמצא ומיחדור הסביבה הגנת הטכנולוגיה, ההפעלה, qr.hilti.com/manual?id=2233920&id=2233921 .QR את הקישור הזה תמצא גם בסוף תיעוד זה בצורת קוד

EC Declaration of Conformity | UK Declaration of Conformity



Manufacturer: Hilti Corporation Feldkircherstraße 100 9494 Schaan | Liechtenstein UK Importer: Hilti (Gt. Britain) Limited No. 1 Circle Square, 3 Symphony Park Manchester, England, M1 7FS

AG 6D-22-125 (01) | AG 6D-22-150 (01)

Serial Numbers: 1-99999999999

2006/42/EC | Supply of Machinery (Safety) Regulations 2008

2014/30/EU | Electromagnetic Compatibility Regulations 2016

2011/65/EU | The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 EN 62841-1:2015, AC:2015, A11:2022 EN IEC 55014-1:2021 EN IEC 62841-2-3:2021/A11:2021 EN IEC 55014-2:2021

Dr. Tahar Zrilli Head of Quality and Process Management Business Area Electric Tools & Accessories

Schaan, 18.03.2024

Edward-Louis Przybylowicz Head of BU Power Tool & Accessories Business Area Electric Tools & Accessories





Ц.

B 22-55 (01)	0,56 kg	1.23 lb
B 22-85 (01)	0,77 kg	1.70 lb
B 22-110 (01)	0,92 kg	2.03 lb
B 22-170 (01)	1,34 kg	2.95 lb

C 4-22	
C 6-22	
C 8-22	



Hilti Corporation LI-9494 Schaan Tel.:+423 234 21 11 Fax:+423 234 29 65 www.hilti.group



